


**Illustrated Parts List**

**HOMELITE®**

**Price .35**

**Part No. 24639-3**


# TRACTORS

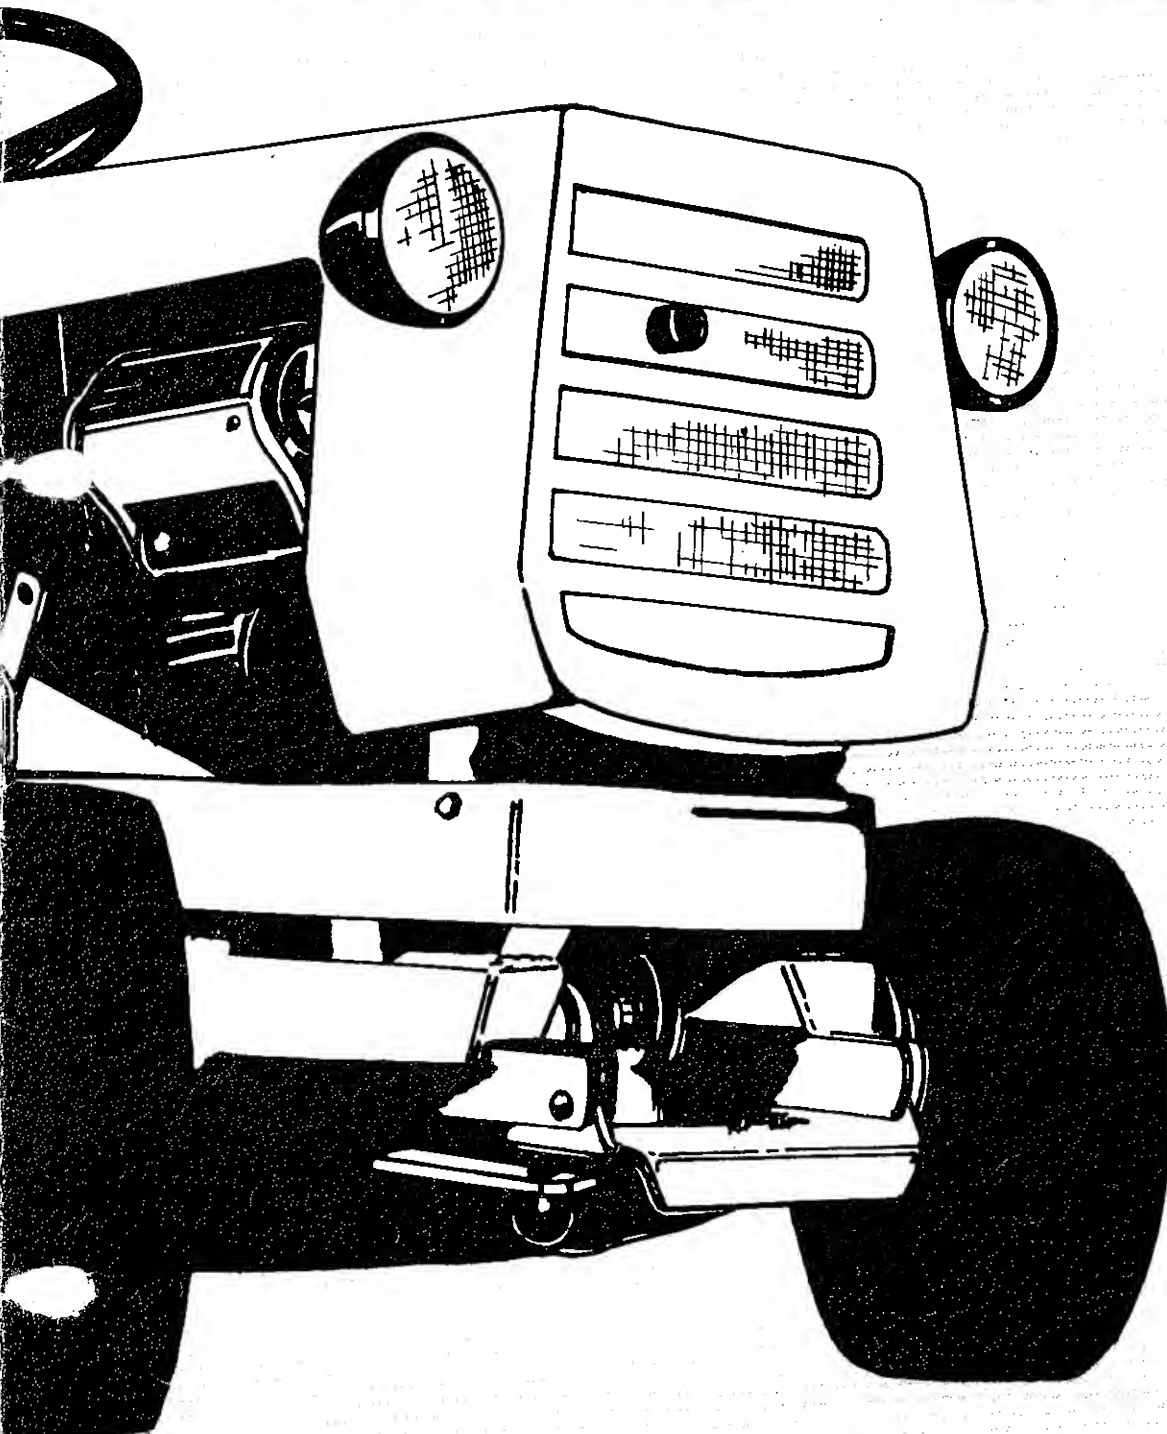


**T-10  
T-16S  
T-16H**

## Draw Bar Assembly T-10

No.	Description	Part No.	Qty.
1	ARM ASSEMBLY (L. H.)	LM-01643-04	1
2	ARM ASSEMBLY (R. H.)	LM-01642-84	1
3	WASHER-lock	LM-09181-99	8
4	SCREW-hex hd. cap	LM-09182-12	4
5	NUT-hex	LM-09182-13	2
6	SCREW-hex hd. cap, 7/16-14 x 1-3/4	LM-09166-09	1
7	WASHER-flat	LM-09184-30	7
8	SPACER	LM-01660-76	2
9	SCREW-hex hd. cap, 7/16-14 x 1-1/2	LM-09166-08	1
10	SCREW-hex hd. cap, 7/16-14 x 1-1/4	LM-09164-32	1
11	DRAWBAR ASSEMBLY	LM-16066-36	1
12	BAR-pull	LM-01570-91	1
13	BAR-draw	LM-01542-03	1
14	SCREW-hex, 7/16-14 x 2	LM-09174-03	1

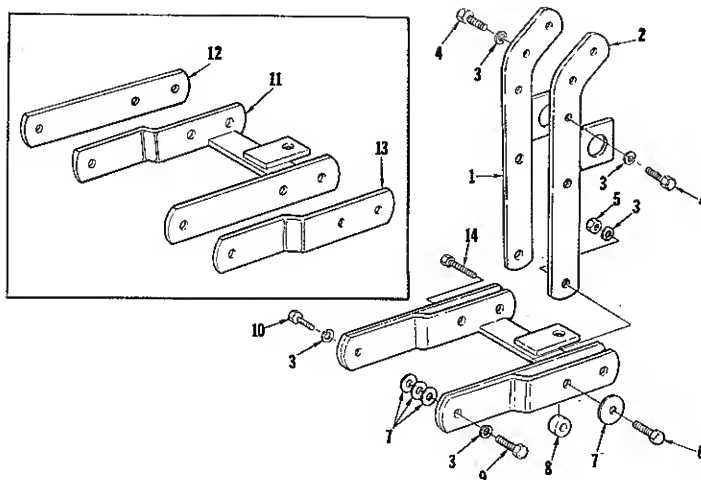

## Lift Assembly T-10 & T-16S


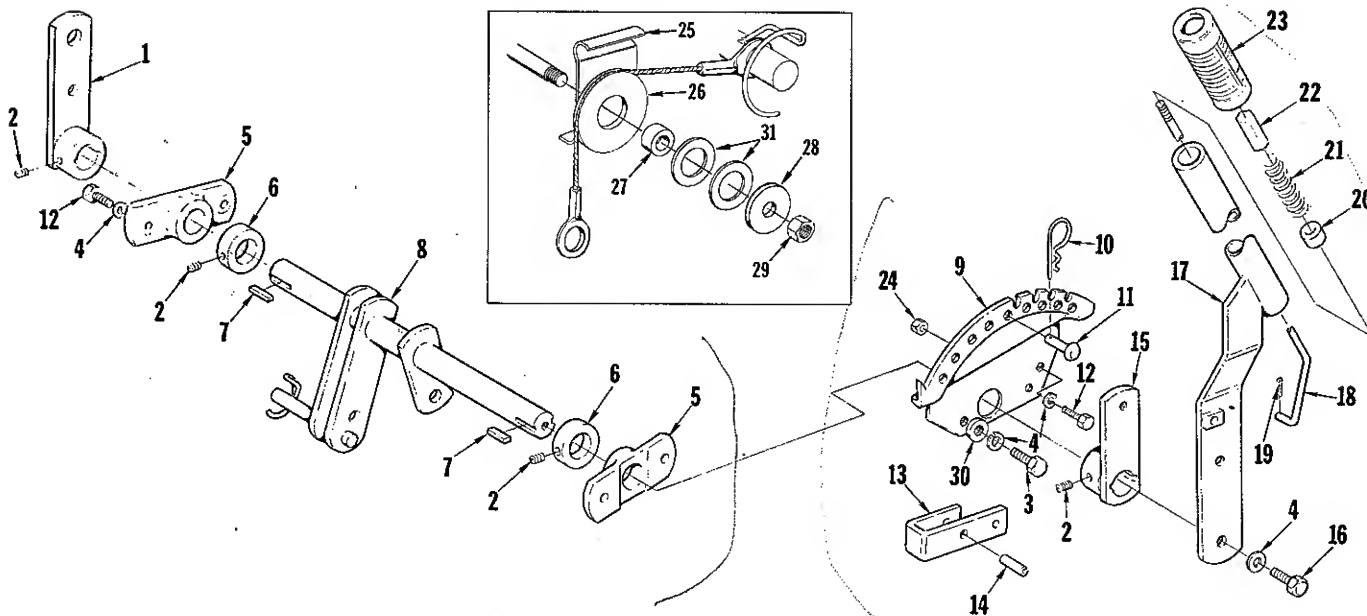


No.	Description	Part No.	Qty.
1	LEVER ASSEMBLY-front lift	LM-01576-25	1
2	SETSCREW-hex soc, 5/16-18 x 5/16	LM-09117-12	4
3	SCREW-hex hd. cap	LM-09077-31	2
4	WASHER-lock	LM-09169-65	7
5	BEARING-lift lever	LM-01576-20	2
6	COLLAR-set	LM-01576-24	2
7	KEY-plain parallel	LM-09213-46	4
8	SHAFT ASSEMBLY-lift	LM-16064-31	1
* 9	QUADRANT-lift lever	LM-16076-48	1
10	CLIP-spring	LM-81610-45	1
* 11	PIN-lock	LM-16087-02	1
12	SCREW-hex hd. cap	LM-09081-27	3
13	LATCH-lift lever	LM-01730-39	1
14	PIN-spring	LM-09181-13	1
15	LIFT LEVER ASSEMBLY-inner sect.	LM-01715-93	1

No.	Description	Part No.	Qty.
16	SCREW-hex hd. cap, 3/8-16 x 1	LM-09212-10	2
17	LEVER ASSEMBLY-lift	LM-16065-51	1
18	ROD-latch lift lever	LM-16065-53	1
19	PIN-cotter	LM-09184-47	1
20	SPACER-handle, lift lever	LM-01542-26	1
21	SPRING-stand	LM-01520-06	1
22	BUTTON-thumb	LM-01542-27	1
23	GRIP-lift lever	LM-01562-09	1
24	NUT-hex fin, 3/8-16	LM-09169-50	1
25	CLIP-cable retaining	LM-16064-30	1
26	PULLEY	LM-01727-25	1
27	SPACER-pulley	LM-16064-69	1
28	WASHER-flat, 13/32	LM-09226-11	1
29	NUT-hex lock, 3/8-16	LM-09234-28	1
30	WASHER-flat, 3/8	LM-09173-78	2
31	WASHER	LM-01084-72	2


ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

## Electric Lift T-16H

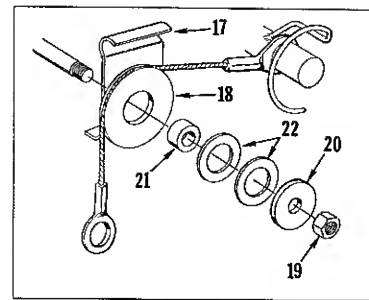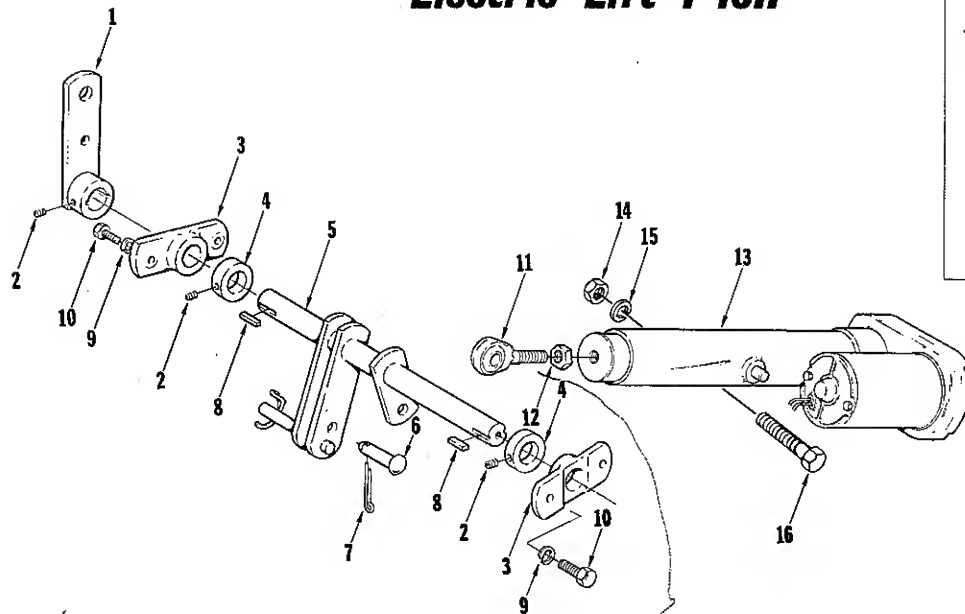

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	LEVER ASSEMBLY-front lift	LM-01576-25	1	12	NUT-jam, hex, 1/2-20	LM-09192-62	1
2	SCREW-set, 5/16-18 x 5/16	LM-09117-12	3	13	ACTUATOR-electric	LM-16033-34	1
3	BEARING-lift lever	LM-01576-20	2	14	NUT-hex, 5/16-18	LM-09173-72	1
4	COLLAR-set	LM-01576-24	2	15	WASHER-lock, 5/16	LM-09173-56	1
5	SHAFT ASSEMBLY-lift	LM-16064-31	1	16	SCREW-hex cap, 5/16-18 x 3-1/2	LM-09221-03	1
6	PIN	LM-01571-94	1	17	CLIP-cable retaining	LM-16064-30	1
7	PIN-cotter	LM-09184-51	1	18	PULLEY	LM-01727-25	1
8	KEY-parallel	LM-09213-46	2	19	NUT-hex lock, 3/8-16	LM-09234-28	1
9	WASHER-lock, 3/8	LM-09169-65	4	20	WASHER-flat, 13/32	LM-09226-11	1
10	SCREW-hex hd. cap, 3/8-16 x 3/4	LM-09081-27	4	21	SPACER-pulley	LM-16064-69	1
11	EYE BOLT	LM-01572-15	1	22	WASHER-	LM-01084-72	2




## Electric Front PTO

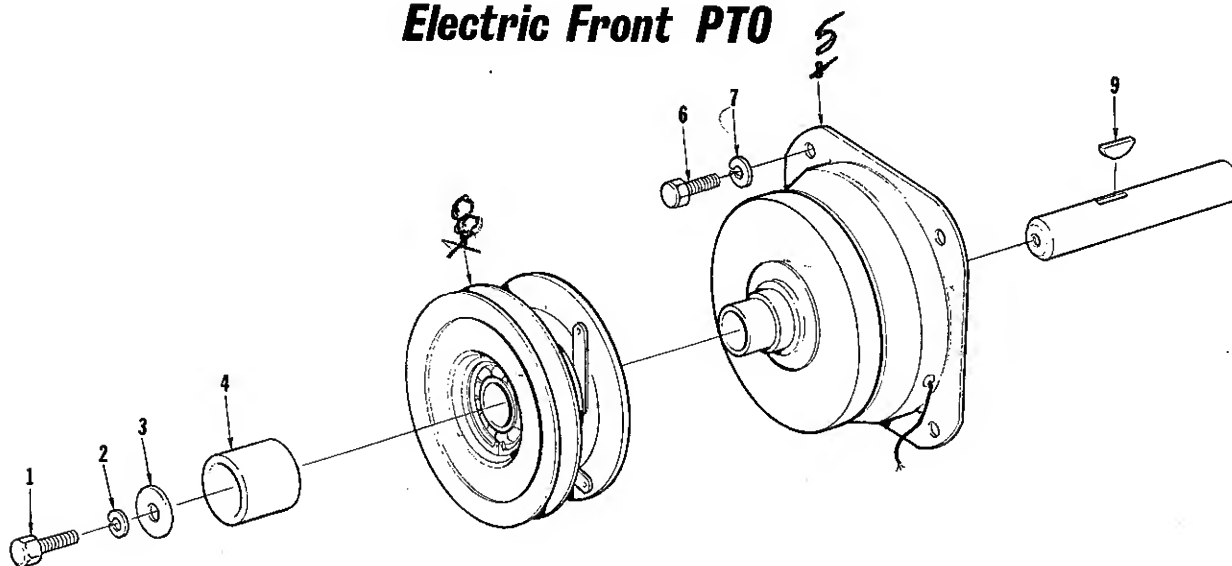

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	SCREW-hex hd. cap, 3/8-24 x 1-1/8	LM-09174-07	1	6	SCREW-hex hd. cap, 7/16-14 x 5/8	LM-09287-11	4
2	WASHER-lock, 3/8	LM-09169-65	1	7	WASHER-lock, 7/16	LM-09181-99	4
3	WASHER-flat	LM-09221-92	1	8	HUB ASSEMBLY-PTO clutch	LM-16069-00	1
4	SPACER	LM-16065-10	1	9	KEY-plain parallel, 1/4 x 1/4	LM-09287-12	1
5	COIL ASSEMBLY-PTO clutch	LM-16068-99	1				

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# Transmission Assembly T-10 & T-16S

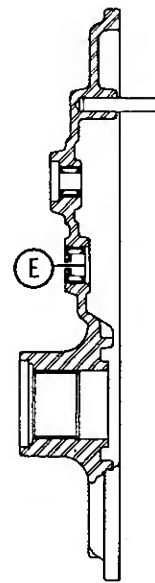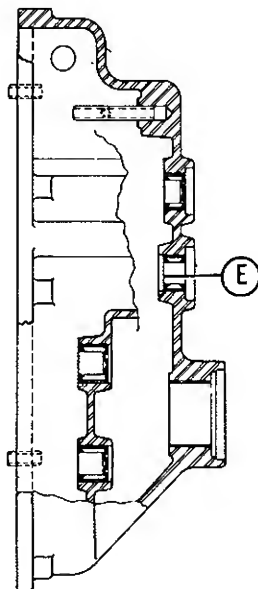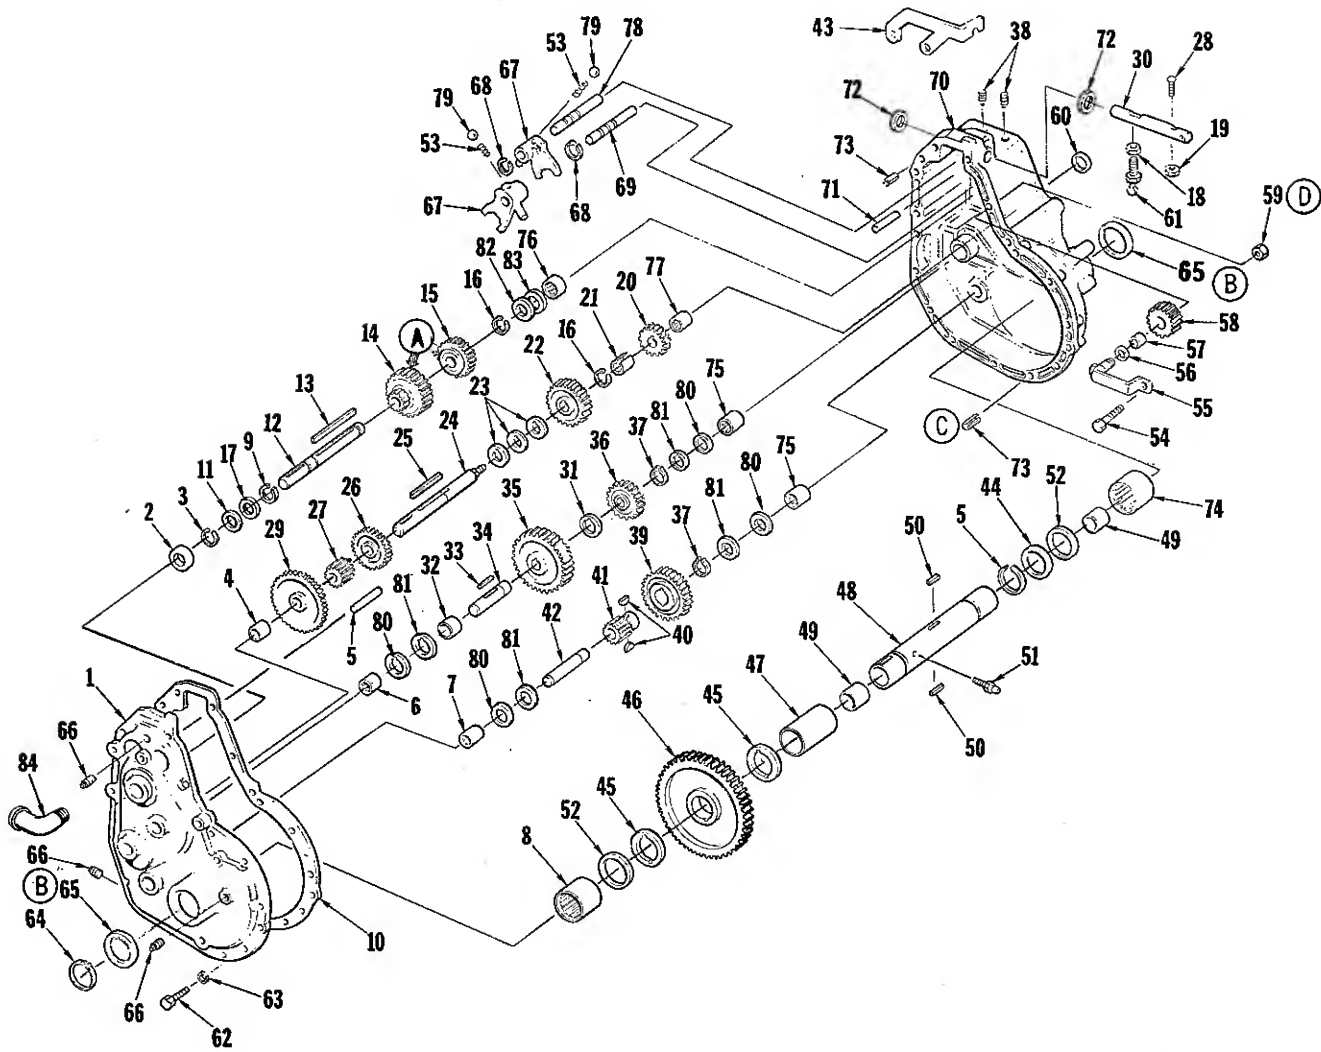

- (A) Indicates beveled side of gears.
- (B) Grease inside lips of all seals before installation.  
Install all seals with spring toward of case.
- (C) Cover must be seated over dowel pins (c) before cap screws are installed.
- (D) Tighten (59) to 55 ft. lbs. torque
- (E) 1/16" clearance from inside surface, all other bearings have flush fit with inside surface.


ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# Transmission Assembly T-10 & T-16S

No.	Description	Part No.	T-10	T-16S	Qty.	No.	Description	Part No.	T-10	T-16S	Qty.
*	TRANSMISSION ASSEMBLY	LM-16082-85	x		1	44	WASHER	LM-01540-97	x	x	1
*	TRANSMISSION ASSEMBLY	LM-16082-84		x	1	45	WASHER-axle tube	LM-01541-30	x	x	2
1	COVER-gear case sub assembly	LM-01642-26	x	x	1	46	GEAR-drive	LM-01540-95	x	x	1
	Includes:					47	SPACER-axle tube	LM-01540-98	x	x	1
2	BEARING	LM-01082-02	x	x	1	48	TUBE & BUSHING ASSEMBLY	LM-01642-22	x	x	1
3	RING-retaining	LM-01640-64	x	x	1	49	Includes: BUSHING	LM-01642-24	x	x	1
4	BEARING-needle	LM-01542-57	x	x	1	50	KEY	LM-01540-96	x	x	2
5	ROLL PIN ASSEMBLY	LM-01545-37	x	x	1	51	FITTING-lube	LM-09128-08	x	x	1
6	BEARING-needle	LM-01542-71	x	x	1	*52	WASHER	LM-01729-77	x	x	2
7	BEARING-needle	LM-01542-59	x	x	1	53	SPRING	LM-01543-23	x	x	2
8	BEARING-needle	LM-01575-20	x	x	1	54	SCREW-hex hd. cap, 3/8-16 x 1-1/4	LM-09174-00	x		1
9	RING-retaining	LM-01181-34	x	x	1	55	PIN ASSEMBLY-rev. gear	LM-01543-52	x		1
10	GASKET-gear case	LM-01642-34	x	x	1	56	WASHER	LM-01543-25	x		1
11	WASHER	LM-01084-72	x	x	1	57	SPACER-rev. gear	LM-01540-84	x		1
*12	SHAFT-pulley	LM-01743-38	x		1	58	GEAR-reverse	LM-01540-87	x		1
*	SHAFT-pulley	LM-01738-07	x		1	59	NUT-hex lock fin.	LM-09180-16	x		1
13	KEY	LM-01642-94	x	x	1	60	SEAL-oil	LM-01542-63	x	x	1
14	PINION ASSEMBLY	LM-01540-75	x	x	1	61	STEM-shift	LM-01542-61	x	x	1
*	GEAR-2nd & 4th	LM-01742-34	x		1	62	SCREW-hex hd. cap, 5/16-18 x 1	LM-09164-31	x	x	14
15	PINION ASSEMBLY-Rev. & II	LM-01540-72	x		1	63	WASHER-lock, 5/16	LM-09173-56	x	x	14
16	RING-retaining	LM-01542-64	x	x	2	64	RING-snap	LM-01542-68	x	x	2
17	WASHER	LM-01544-62	x	x	1	65	SEAL	LM-01542-69	x	x	2
*18	NUT-full, 3/8-24	LM-09221-32	x	x	1	66	PLUG-pipe	LM-09016-53	x	x	3
19	NUT-hex jam fin, 5/16-18	LM-09201-61	x	x	1	67	FORK-shift	LM-01540-69	x	x	2
*20	PINION-Rev. & IV	LM-01742-28	x	x	1	68	RING-retaining	LM-80610-48	x	x	2
21	SPACER	LM-01540-82	x	x	1	69	SHAFT-shifter, HI-Lo	LM-01540-68	x	x	1
22	GEAR-driven II	LM-01540-81	x	x	1	70	CASE-gear sub assembly	LM-01575-16	x		1
23	SPACER-transmission gear	LM-80610-12	x	x	3	*	CASE-gear sub assembly	LM-01745-82	x		1
24	SHAFT-1st Intm.	LM-01572-90	x	x	1		Includes:				
25	KEY	LM-01543-54	x	x	1		SPACER (not shown)	LM-01210-84	x		2
26	PINION-driven III	LM-01540-80	x	x	1	71	ROLL PIN SUB ASSEMBLY	LM-01545-38	x	x	1
27	PINION-1st Intm.	LM-01540-79	x	x	1	*	PLUG-expansion (not shown)	LM-01745-83	x		1
*28	BOLT-rd. hd., 5/16-18 x 1	LM-01722-41	x	x	1	72	SEAL-oil	LM-01576-19	x	x	2
29	GEAR-driven 1st	LM-01540-78	x	x	1		SCREW-set (not shown)	LM-09028-70	x		1
30	ROD-shift	LM-01642-50	x	x	1	73	PIN-roll	LM-09181-13	x	x	2
31	WASHER	LM-01540-38	x	x	1	74	BEARING-needle	LM-01575-19	x	x	1
32	SPACER	LM-01540-90	x	x	1	75	BEARING-needle	LM-01542-59	x		2
33	KEY	LM-01542-67	x	x	1		BEARING-needle	LM-01542-59	x		1
34	SHAFT-2nd. intermediate	LM-01540-86	x	x	1	76	BEARING-needle	LM-01542-57	x	x	1
35	GEAR-2nd. intermediate	LM-01540-89	x	x	1	77	BEARING-needle	LM-01542-58	x	x	1
36	PINION-2nd. intermediate	LM-01640-62	x	x	1	78	SHAFT-shifter rev. med.	LM-01540-67	x	x	1
37	RING-retaining	LM-01542-66	x	x	2	79	BALL-shift lock	LM-01542-62	x	x	2
38	SCREW-set soc. hd., 5/16-18 x 1/2	LM-09172-31	x	x	2	*80	WASHER	LM-01729-79	x	x	4
39	GEAR-3rd. intermediate	LM-01640-51	x	x	1	*81	WASHER	LM-01729-78	x		3
40	KEY-Woodruff #6	LM-09102-24	x	x	2		WASHER	LM-01729-78	x		4
41	PINION-3rd. intermediate	LM-01540-92	x	x	1	*82	WASHER	LM-01729-82	x	x	1
42	SHAFT-3rd. intermediate	LM-01540-91	x	x	1	*83	WASHER	LM-01729-81	x	x	1
43	SUPPORT-switch	LM-01642-51	x	x	1	84	ELBOW-street	LM-09017-23	x		1

\* Denotes new parts

# Transmission Assembly T-16H

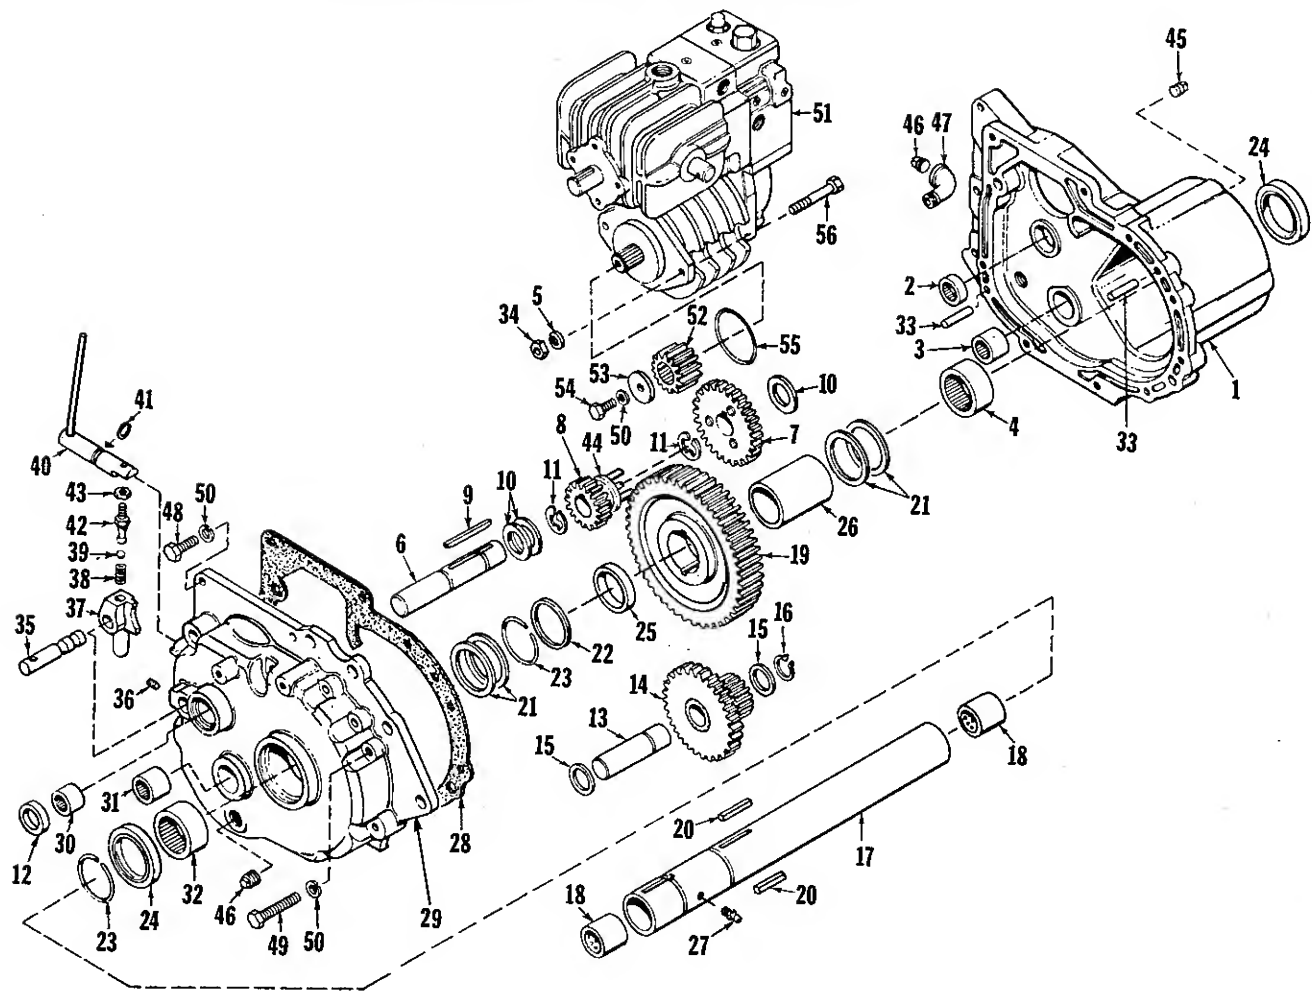


No.	Description	Part No.	Qty.
1	GEAR CASE	LM-01661-05	1
	Includes:		
2	BEARING-needle	LM-01542-71	1
3	BEARING-needle	LM-01660-18	1
4	BEARING-needle	LM-01575-19	1
5	WASHER-lock, 7/16	LM-09191-99	2
* 6	BRAKE SHAFT	LM-01762-46	1
* 7	GEAR-1st. Interm.	LM-01762-45	1
* 8	PINION-1st. Interm.	LM-01762-43	1
* 9	KEY	LM-01762-44	1
10	WASHER	LM-01660-13	3
* 11	RING-retainer	LM-01769-80	2
12	SEAL-oil	LM-01660-21	1
13	SHAFT-Interm.	LM-01660-12	1
* 14	PINION & GEAR ASSEMBLY	LM-01762-36	1
15	WASHER	LM-01660-16	2
16	RING-retaining	LM-01660-17	1
17	AXLE TUBE ASSEMBLY	LM-01660-66	1
18	Includes: BUSHING	LM-01642-24	2
19	GEAR-drive	LM-01660-06	1
20	KEY	LM-01540-96	2
21	WASHER	LM-01540-97	4
22	WASHER	LM-01661-67	1
23	RING-snap	LM-01542-68	2
24	SEAL	LM-01542-69	2
25	SPACER-side (R. H.)	LM-01660-40	1
26	SPACER-side (L. H.)	LM-01660-41	1
27	FITTING-grease	LM-09128-08	1
28	GASKET-gear case	LM-01660-43	1
29	COVER-gear case sub assembly	LM-01661-03	1
	Includes:		
30	BEARING-needle	LM-01660-19	1

No.	Description	Part No.	Qty.
31	BEARING-needle	LM-01660-18	1
32	BEARING-needle	LM-01575-19	1
33	PIN-roll, 3/8 x 1	LM-09183-90	2
34	NUT-full hex, 7/16-14	LM-09182-13	2
* 35	SHAFT-shifter	LM-01762-39	1
36	SCREW-cone pt, hollow hd. 5/16-18 x 1 1/2	LM-09172-31	1
* 37	FORK-shift	LM-01762-34	1
38	SPRING	LM-01543-23	1
39	BALL-shift lock	LM-01542-62	1
* 40	SHIFT SHAFT ASSEMBLY	LM-01762-38	1
41	"O" RING	LM-09235-48	1
42	STEM-shift	LM-01660-29	1
43	NUT-hex jam, 5/16-24	LM-09204-38	1
* 44	FLANGE-drive	LM-01762-42	1
45	PLUG-pipe, 1/4	LM-09016-52	1
46	PLUG-pipe	LM-09016-53	2
47	ELBOW-street, 3/8	LM-09017-23	1
48	SCREW-hex cap, 5/16-18 x 1	LM-09164-31	5
49	SCREW-hex cap, 5/16-18 x 2	LM-09193-54	4
50	WASHER-lock, 5/16	LM-09173-56	10
51	PUMP & MOTOR UNIT-hydrostatic	LM-01660-97	1
52	PINION-motor shaft	LM-01660-03	1
53	WASHER	LM-01231-44	1
54	SCREW-hex cap, 5/16-24 x 5/8	LM-09219-80	1
55	"O" RING	LM-01660-26	1
56	SCREW-hex cap, 7/16-14 x 4	LM-01762-42	1

\* Denotes new parts

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# Hydrostatic Cooling & Controls T-16H

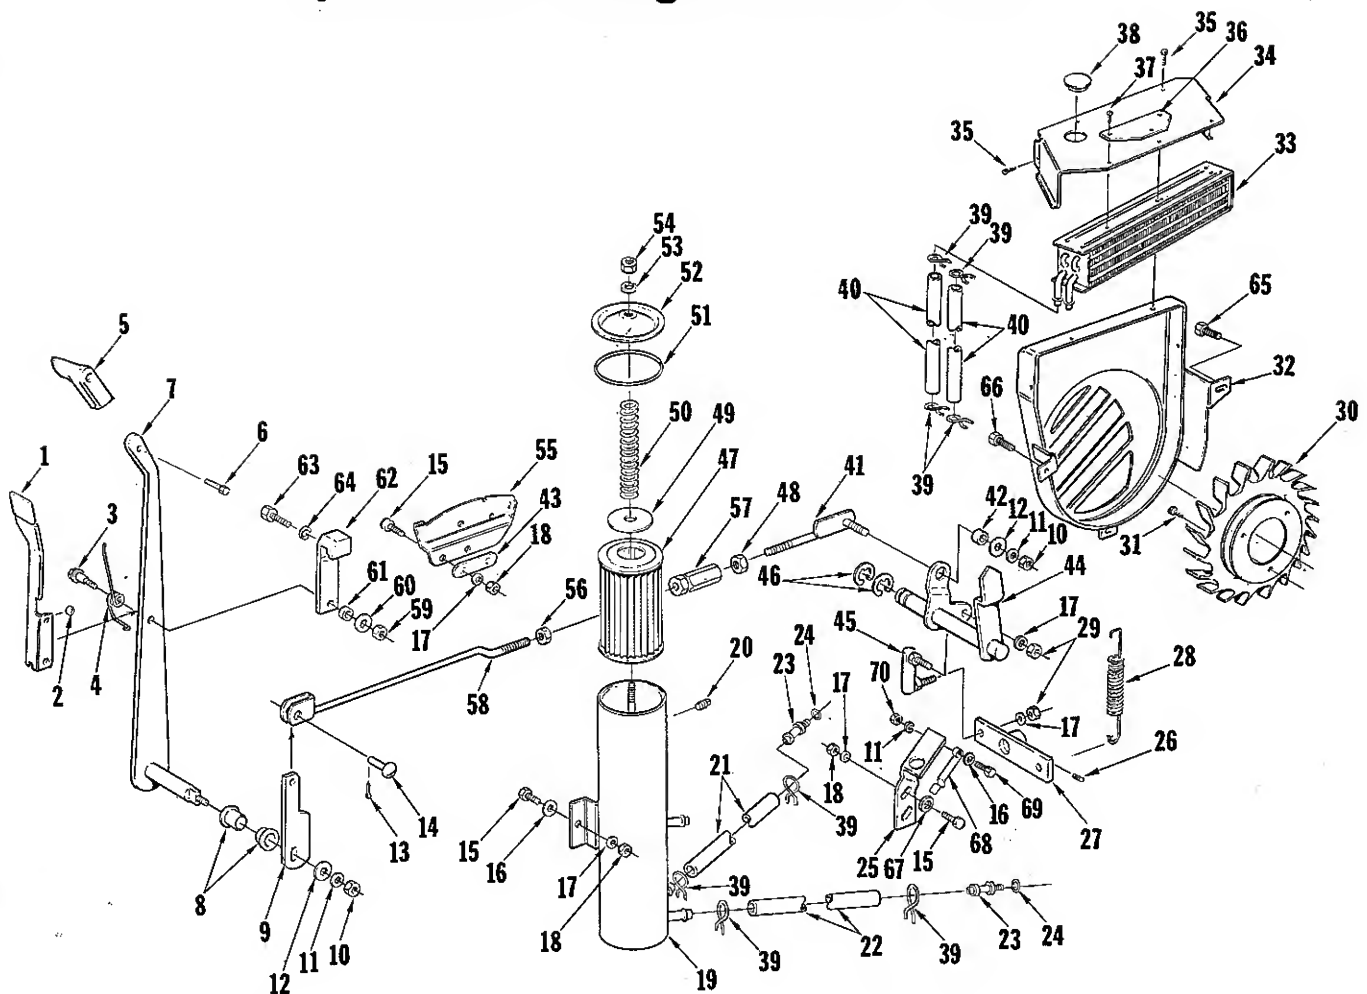


No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	HANDLE-trip	LM-01717-79	1	36	CLIP-spring	LM-01661-60	1
2	BALL-shift handle	LM-01661-78	1	37	SCREW-rd hd., 10-32 x 1/2	LM-09174-52	3
3	BOLT-shoulder	LM-01660-51	1	38	CAPLUG	LM-01661-65	1
4	SPRING	LM-01660-47	1	39	CLAMP-hose	LM-01660-44	8
5	HANDLE	LM-01711-65	1	40	HOSE-hydraulic	LM-01661-38	2
6	SCREW-thread cutting, 1/4-20 x 7/8	LM-09221-25	1	41	ROD ASSEMBLY-speed control	LM-01660-89	1
7	LEVER ASSEMBLY-speed control	LM-01710-72	1	42	SPACER	LM-01660-78	1
8	BUSHING-flanged	LM-16104-56	2	43	SPACER-speed control quadrant	LM-16074-15	1
9	LINK-speed control	LM-16065-48	1	44	SHAFT ASSEMBLY-control	LM-01660-95	1
10	NUT-hex fin, 3/8	LM-09169-50	2	45	JOINT-ball (double end)	LM-01660-79	1
11	WASHER-lock, 3/8	LM-09169-65	3	46	"E" RING	LM-16021-55	2
12	WASHER-3/8	LM-09173-78	2	47	ELEMENT-filter	LM-01661-47	1
13	PIN-cotter	LM-09184-47	1	48	NUT-hex, 7/16-14 (L. H. thread)	LM-09254-76	1
*14	PIN	LM-16087-02	1	49	WASHER	LM-01661-50	1
15	SCREW-hex hd. cap, 5/16-18 x 3/4	LM-09173-97	6	50	SPRING	LM-01661-71	1
16	WASHER-flat, 5/16	LM-09176-42	5	51	"O" RING	LM-01660-20	1
17	WASHER-lock, 5/16	LM-09173-56	9	52	COVER-reservoir	LM-01660-80	1
18	NUT-hex fin, 5/16-18	LM-09173-72	7	53	WASHER-nylon	LM-01661-61	1
19	RESERVOIR ASSEMBLY	LM-01661-40	1	54	NUT-lock, 5/16-18 (ESNA)	LM-09244-33	1
20	PLUG-plastic	LM-16035-49	1	55	QUADRANT-speed control	LM-01714-29	1
21	HOSE-hydraulic	LM-01661-36	1	56	NUT-hex fin, 7/16-14 (R. H.)	LM-09182-13	1
22	HOSE-hydraulic	LM-01661-37	1	57	TURNBUCKLE	LM-01660-88	1
23	INSERT-beaded	LM-01661-39	2	58	ROD ASSEMBLY-speed control (front)	LM-01660-83	1
24	"O" RING	LM-01660-24	2	59	NUT-hex lock, 1/4-20	LM-09233-58	1
*25	SUPPORT-switch	LM-16085-21	1	60	WASHER-standard, 1/4	LM-09173-77	1
26	PIN-spring	LM-09169-37	1	61	SPACER	LM-01660-63	1
27	LINK ASSEMBLY-control	LM-01660-92	1	62	CLAMP-stop	LM-01714-32	1
28	SPRING	LM-01071-35	1	63	SCREW-hex hd. cap, 1/4-20 x 1/2	LM-09082-95	1
29	NUT-hex fin, 5/16-24	LM-09202-63	2	64	WASHER-lock, reg., 1/4	LM-09169-64	1
30	FAN-pulley	LM-01660-22	1	65	SCREW-hex cap, 5/16-18 x 7/8	LM-09193-19	1
31	SCREW-hex washer hd., 1/4-20 x 1/2	LM-09250-03	3	66	SCREW-self-tapping hex, 5/16 x 5/8	LM-09228-54	1
32	SHROUD ASSEMBLY-fan	LM-01661-14	1	67	WASHER-flat, 7/16	LM-09184-30	2
33	COOLER-oil	LM-01661-35	1	*68	CLIP-switch	LM-16085-22	1
34	DEFLECTOR-cooler	LM-01661-34	1	*69	BOLT-shoulder	LM-16080-80	1
35	SCREW-self-tapping hex, 10 x 3/8	LM-09237-35	4	70	NUT-jam, 3/8-16	LM-09174-21	1

\* Denotes new parts

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# Electrical T-10, T-16S & T-16H

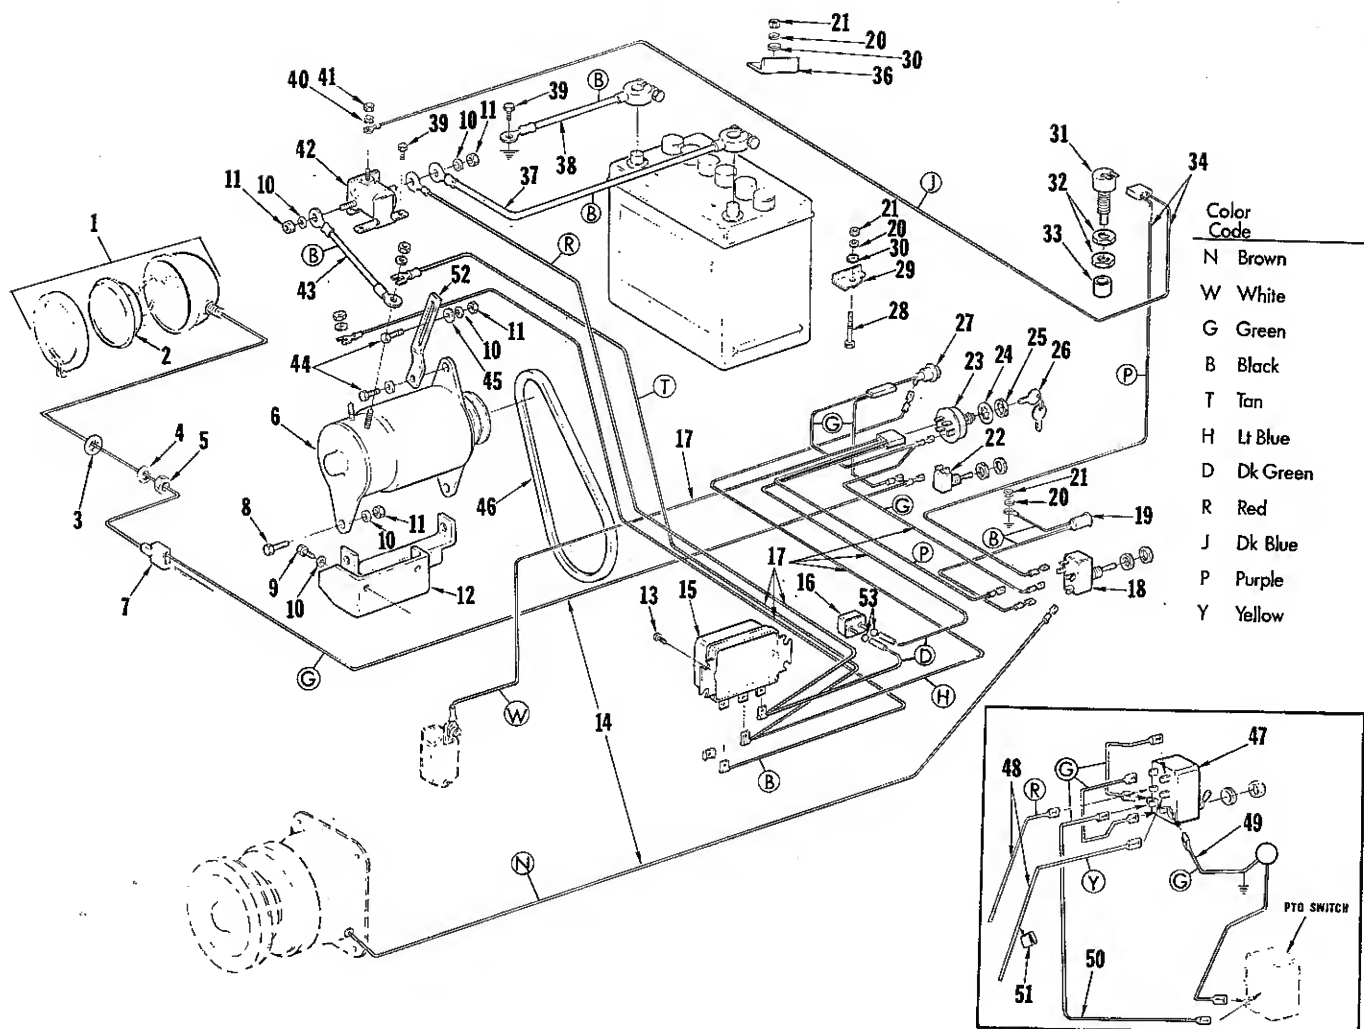


No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	LAMP ASSEMBLY	LM-01221-75	2	29	CLAMP-battery (L. H.)	LM-16073-43	1
2	Includes: BULB	LM-01221-64	2	30	WASHER-1/4	LM-09173-77	2
3	WASHER-flat, 7/16	LM-09184-30	6	31	SWITCH-safety	LM-01222-33	1
4	WASHER-lock, 1/2	LM-09169-66	2		Includes:		
5	NUT-hex fin, 1/2-13	LM-09169-51	2	32	NUT-hex special	LM-01222-34	1
6	MOTOR-generator	LM-01222-36	1	33	BOOT-rubber	LM-16044-40	1
7	CONNECTOR-insulated	LM-01221-82	1	34	WIRE ASSEMBLY-switch	LM-16067-65	1
8	SCREW-hex hd. cap, 5/16-18 x 1-1/4	LM-09077-29	2	35	BATTERY	LM-16073-60	1
9	SCREW-hex hd. cap, 5/16-18 x 3/4	LM-09173-97	2		Includes: LABEL (not shown)	LM-16073-57	1
10	WASHER-lock, reg, 5/16	LM-09173-56	8	36	CLAMP-battery (R. H.)	LM-16073-42	1
11	NUT-hex fin, 5/16-18	LM-09173-72	5	37	CABLE-battery to solenoid	LM-16012-43	1
12	SUPPORT ASSEMBLY-generator	LM-16063-67	1	38	CABLE-battery to ground	LM-01718-11	1
13	SCREW-tapping (Tap-tite) 1/4-20 x 5/8	LM-09274-29	3	39	SCREW-Tap-tite, 1/4-20 x 1/2	LM-09250-03	2
14	HARNESS ASSEMBLY-light & PTO	LM-16067-66	1	40	WASHER-lock, ext. tooth #10	LM-09227-11	1
15	REGULATOR-voltage	LM-01221-93	1	41	NUT-mach. screw hex, 10-32	LM-09174-15	1
16	BREAKER-circuit	LM-01721-63	1	42	SOLENOID	LM-01222-16	1
17	HARNESS ASSEMBLY-wiring	LM-16067-64	1	43	CABLE-generator to solenoid	LM-16036-18	1
18	SWITCH TOGGLE-PTO	LM-16072-42	1	44	SCREW-hex hd. cap, 5/16-18 x 3/4	LM-09213-32	2
19	LIGHT-pilot	LM-16072-44	1	45	WASHER-5/16	LM-09176-42	1
20	WASHER-lock, 1/4	LM-09169-64	3	46	BELT-generator	LM-16073-23	1
21	NUT-hex, 1/4-20	LM-09166-22	3	47	SWITCH-toggle (actuator) T-16H only	LM-16072-43	1
22	SWITCH-light toggle	LM-01221-84	1	48	HARNESS-switch to actuator (T-16H only)	LM-16067-69	1
23	SWITCH-key	LM-01222-01	1	49	LEAD-switch to ground (T-16H only)	LM-16073-72	1
	Includes:			50	LEAD-switch to PTO switch (T-16H only)	LM-16067-68	1
24	WASHER	LM-09286-36	1	51	CLIP-speed (T-16H only)	LM-01650-73	1
25	NUT-hex	LM-01222-35	1	52	ARM-belt tightener	LM-01571-02	1
26	KEY-set (ignition)	LM-16032-49	1	53	WASHER-insulation	LM-16076-08	2
27	INDICATOR-lamp assembly	LM-01712-95	1				
28	SCREW-hex hd. cap, 1/4-20 x 2	LM-09199-29	2				

\* Denotes new parts

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.



# Frame, Hood, Dash & Seat

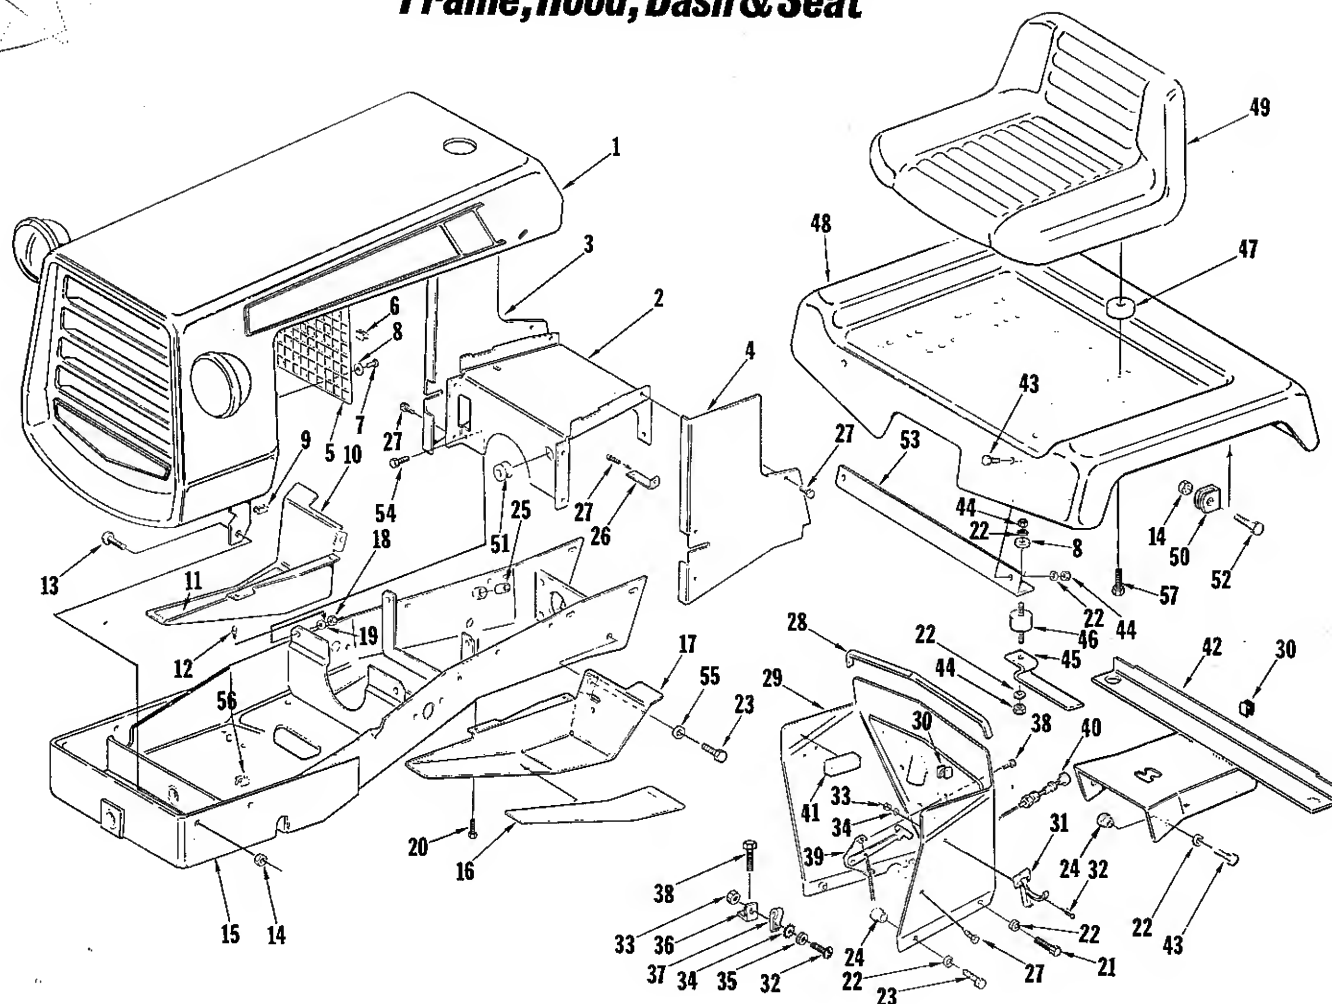

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	HOOD ASSEMBLY	LM-16063-79	1	30	CLIP-cable	LM-01724-34	2
*2	SUPPORT ASSEMBLY-battery	LM-16081-06	1	31	LATCH-hood	LM-16032-78	2
3	PANEL-side (R. H.)	LM-16064-48	1	32	SCREW-rd. hd., 10-24 x 3/8	LM-09160-79	5
4	PANEL-side (L. H.)	LM-16064-47	1	33	NUT-hex, 10-24	LM-09166-21	5
5	SCREEN-grille	LM-16071-83	1	34	WASHER-lock #10, ext. tooth	LM-09227-11	5
6	SPEED-clip	LM-01650-74	7	35	WASHER-#10	LM-09232-12	1
7	RIVET-pop	LM-16045-56	4	36	BRACKET-throttle cable	LM-01573-15	1
8	WASHER-1/4	LM-09173-77	6	37	CLIP-throttle cable	LM-16031-04	1
9	SPEED CLIP	LM-16044-51	1	38	SCREW-tapping, 1/4-20 x 5/8 (Tap-tite)	LM-09274-29	3
10	FOOT REST (R. H.)	LM-16064-09	1	39	THROTTLE	LM-16066-89	1
11	PAD-foot (R. H.)	LM-16066-77	1	40	CHOKE (includes nut & washer)	LM-01713-34	1
12	FITTING-lube (drive type)	LM-09211-33	1	41	GASKET-felt	LM-01065-82	8
13	BOLT-carriage, 3/8-16 x 3/4	LM-09221-10	2	42	COVER ASSEMBLY-frame	LM-16064-61	1
14	NUT-hex lock, 3/8-16	LM-09234-28	4	43	SCREW-hex hd. cap, 5/16-18 x 5/8	LM-09193-18	6
*15	FRAME ASSEMBLY	LM-16081-08	1	44	NUT-hex, 5/16-18	LM-09173-72	10
16	PAD-foot (L. H.)	LM-16066-78	1	45	CLIP-spring	LM-16068-23	2
17	FOOT REST (L. H.)	LM-16064-08	1	46	CONNECTOR-cushion	LM-01570-94	2
18	NUT-hex hd., 3/8-16	LM-09169-50	4	*47	CONNECTOR-cushion	LM-16085-35	4
19	WASHER-lock, 3/8	LM-09169-65	4	48	DECK ASSEMBLY-seat	LM-01661-11	1
20	SCREW-Tap-tite, 3/8-16 x 3/4	LM-09236-83	4	*49	SEAT	LM-13079-86	1
21	SCREW-hex hd. cap, 5/16-18 x 3/4	LM-09173-97	2	50	STOP-seat deck	LM-16078-70	2
22	WASHER-lock, 5/16	LM-09173-56	12	51	GROMMET (T-10, T-16S)	LM-16021-02	1
23	SCREW-hex hd. Tap-tite, 3/8-16 x 1/2	LM-09248-56	4		GROMMET (T-16H only)	LM-16021-02	2
24	NUT-retainer, 5/16-18	LM-09228-58	6	52	SCREW-hex hd. cap, 3/8-16 x 1-1/4	LM-09174-00	2
25	BEARING-sleeve	LM-16064-45	2	53	BRACKET-front seat deck	LM-01640-29	1
26	CLIP-closed (furn. open)	LM-09253-07	1	54	SCREW-hex cap, 3/8-16 x 3/4	LM-09081-27	4
	CLIP-closed (T-16H)	LM-09253-07	2	55	WASHER-flat, 13/32	LM-09227-55	2
27	SCREW-Tap-tite, 1/4-20 x 1/2	LM-09250-03	9	56	CLIP-cable	LM-01724-36	1
28	MOULDING-dash	LM-16066-16	1	57	SCREW-cap, 5/16-18 x 1	LM-09213-33	4
*29	PANEL ASSEMBLY-instrument	LM-16080-83	1				

\* Denotes new parts

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.


#

# Engine, Drive Shaft & Bevel Gear Box

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	INSULATION-fuel tank	LM-01221-43	1	40	SHIM use as req'd	LM-01717-90	5
2	STRAP-fuel tank (upper)	LM-01727-44	2	41	SPACER	LM-01717-92	1
3	STRAP-fuel tank	LM-16066-55	2	42	SEAL-oil	LM-01717-87	1
4	ENGINE-T-10 HP (Model 243431, type 0665-01)		1	43	BEARING-ball	LM-01722-56	2
	ENGINE-T-16 HP (Model 326431, type 0133-01)		1	44	PLUG-pipe	LM-01543-26	1
5	NUT-hex, 5/16-18	LM-09173-72	1	45	GEAR-bevel driven	LM-01717-96	1
6	WASHER-lock, 5/16	LM-09173-56	2	46	RING-retaining	LM-01722-06	2
7	STRAP-muffler	LM-01718-80	1	47	SHAFT-driven	LM-01739-66	1
8	SCREW-hex hd. cap, 5/16-18 x 1	LM-09164-31	1	48	KEY-#9	LM-09051-23	3
9	MUFFLER-exhaust	LM-16064-12	1	49	WASHER	LM-01727-53	1
10	SCREW-hex hd. cap, 3/8-16 x 1-1/2	LM-09193-60	3	50	PLATE-bearing clamp	LM-01540-40	1
11	CLAMP-muffler w/fasteners	LM-01720-61	1	51	SCREW-cap	LM-09193-18	1
12	ELBOW & NIPPLE ASSEMBLY	LM-01721-95	1	52	WASHER	LM-01540-26	1
13	WASHER-3/8	LM-09173-78	4	53	SCREW-hex hd. cap, 5/16-18 x 3/4	LM-01542-81	1
14	WASHER-flat, 3/8	LM-09169-65	12	54	GASKET	LM-01542-82	1
15	NUT-hex fin, 3/8-16	LM-09169-50	8	55	COVER-housing	LM-01642-49	1
16	NUT-lock	LM-01543-78	1	56	SCREW-capw/int. tooth washer		
17	SCREW-rect. hd., 3/8-16 x 1-5/16	LM-01724-55	1		1/4-20 x 5/8	LM-16040-97	6
18	WASHER-flat, 11/32"	LM-09193-81	1	57	PLUG-pipe, 1/4	LM-09016-52	1
19	CLAMP-hose	LM-01543-72	4	58	PLUG-pipe, 3/8	LM-09016-53	1
20	FILTER-fuel	LM-01732-06	1	59	ELBOW-street, 3/8 x 90°	LM-09017-23	1
*21	HOSE-fuel 11"	LM-16081-93	2	60	GEAR-bevel driver	LM-01727-52	1
22	TANK-fuel	LM-16066-53	1	*61	SHAFT-driver	LM-01727-50	1
23	CAP-fuel tank w/gauge	LM-16027-24	1	*62	PLATE-side R. H. (T-16S)	LM-01738-59	1
24	SCREW-hex hd. cap, 3/8-16 x 1-1/2	LM-09219-69	2		PLATE-side, R. H. (T-10 only)	LM-16066-09	1
25	SPACER-drive shaft	LM-01723-29	2		PLATE-side, R. H. (T-16H)	LM-01660-49	1
26	COUPLING-drive shaft	LM-01730-26	2	63	PLATE-side, L. H. (T-10, T-16S)	LM-01740-32	1
27	SHAFT ASSEMBLY-drive	LM-16070-37	1		PLATE-side, L. H. (T-16H)	LM-01740-33	1
28	WASHER-special	LM-01574-24	14	*64	BRACKET-voltage reg.	LM-01769-31	1
29	SCREW-hex hd. cap, 3/8-16 x 1-1/4	LM-09204-15	6	65	SCREW-hex hd. cap, 7/16-14 x 1-1/4		
30	FLANGE-drive shaft	LM-01722-64	1		(T-10)	LM-09206-77	2
31	KEY-parallel, special	LM-01574-27	1		WASHER-lock (T-10)	LM-09181-99	15
32	SETSCREW-hex soc., 3/8-24 x 5/16	LM-16054-96	1	66	WASHER-lock (T-16S)	LM-09181-99	16
*33	SUPPORT ASSEMBLY-fuel tank	LM-16080-89	1		WASHER-lock (T-16H)	LM-09181-99	17
*34	CLIP-spring (T-16S)	LM-01748-93	1	*67	SCREW-hex hd. cap, 7/16-14 x 1		
35	SCREW-hex hd. cap, 5/16-18 x 1/2	LM-09248-56	2		(T-10, T-16H)	LM-09206-76	10
	BEVEL GEAR BOX ASSEMBLY	LM-16062-07	1	*	SCREW-hex hd. cap, (T-16S)	LM-09206-76	11
	Includes:			68	SCREW-hex hd. cap (T-16S)	LM-09206-77	1
36	HOUSING-bevel gear	LM-01717-97	1		SCREW-hex hd. cap (T-16H)	LM-09206-77	3
37	SEAL-oil	LM-01181-17	2	69	SCREW-hex hd. cap	LM-09166-08	4
38	BEARING-needle	LM-01542-79	2	70	NUT-hex, 7/16-14 (T-16H)	LM-09182-13	3
39	SHIM	LM-01717-91	1				

\* Denotes new parts


# Rear Axle & Differential Assembly

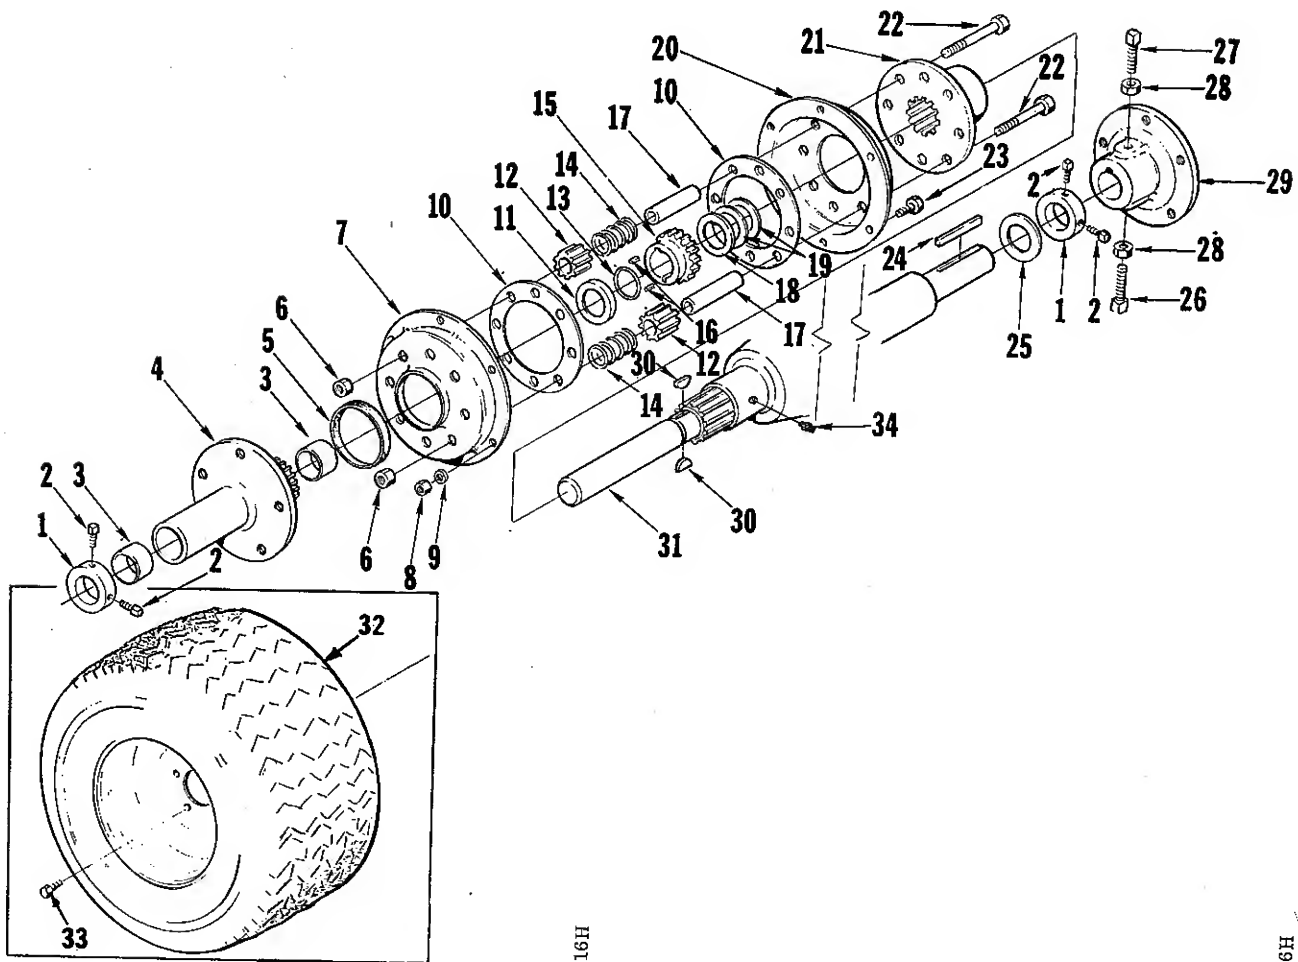

No.	Description	Part No.	T-10	T-16S - T-16H	Qty.	No.	Description	Part No.	T-10	T-16S - T-16H	Qty.
1	COLLAR-axle	LM-01540-65	x	x	2	23	SCREW-hex hd. cap, 1/4-20 x 5/8	LM-09077-27	x	x	6
2	SET SCREW-sq., 5/16-18 x 3/8	LM-09287-09	x	x	4	24	KEY	LM-09058-58	x	x	1
3	BEARING	LM-01530-68	x	x	2		KEY	LM-01591-29	x	x	1
4	HUB ASSEMBLY-wheel (R. H.)	LM-01715-19	x	x	1	25	WASHER	LM-01050-50	x	x	1
* 5	HUB ASSEMBLY-wheel (R. H.)	LM-01769-46	x	x	1	26	SCREW-3/8-16 x 1-1/2	LM-16024-03	x	x	1
6	SEAL-differential cover	LM-01211-90	x	x	1	27	SCREW-set	LM-16024-04	x	x	1
7	NUT-hex lock, 3/8-16	LM-09234-28	x	x	8	28	NUT-jam, hex, 3/8-16	LM-09174-21	x	x	2
8	COVER-differential	LM-01718-54	x	x	1	29	HUB-wheel (L. H.)	LM-01542-08	x	x	1
9	NUT-hex fin., 1/4-20	LM-09166-22	x	x	6	30	KEY-drive	LM-01571-20	x	x	2
10	LOCKWASHER-1/4	LM-09169-64	x	x	6	31	AXLE-rear	LM-01715-26	x	x	1
11	RING-spacer	LM-01715-17	x	x	2	*32	WHEEL & TIRE-rear (T-10)	LM-16079-56	x	x	2
12	WASHER-axle	LM-01542-77	x	x	1		23 x 8.50-12				
13	PINION-differential	LM-01585-79	x	x	8		Includes:				
14	RING-retaining	LM-01542-91	x	x	1		STEM & CAP	LM-16023-39			
15	SPRING	LM-01620-85	x	x	8		TIRE-Purchase Locally				
* 16	GEAR-differential	LM-01642-19	x	x	1	*	WHEEL	LM-01702-78			
* 17	GEAR-differential	LM-01770-41	x	x	1		TUBE-Purchase Locally				
18	KEY-Hi Pro	LM-07255-01	x	x	2	*32	WHEEL & TIRE-rear	LM-16079-58	x	x	2
19	KEY-Hi Pro	LM-09283-56	x	x	2		23 x 10.50				
20	SPINDLE-pinion differential	LM-01210-83	x	x	8		Includes:				
21	WASHER-axle	LM-01715-15	x	x	3		TIRES-Purchase Locally				
22	WASHER-axle	LM-01715-15	x	x	2	*	WHEEL	LM-01702-78			
23	WASHER-axle	LM-01540-35	x	x	2		TUBE-Purchase Locally				
24	COVER-differential	LM-01718-53	x	x	1	33	BOLT-hub	LM-82611-00	x	x	10
25	CARRIER-differential	LM-01642-17	x	x	1	34	FITTING-grease	LM-09150-19	x	x	1
26	SCREW-hex cap, 3/8-16 x 2-1/2	LM-09219-72	x	x	8						

\* Denotes new parts

# Clutch & Brake T-16H

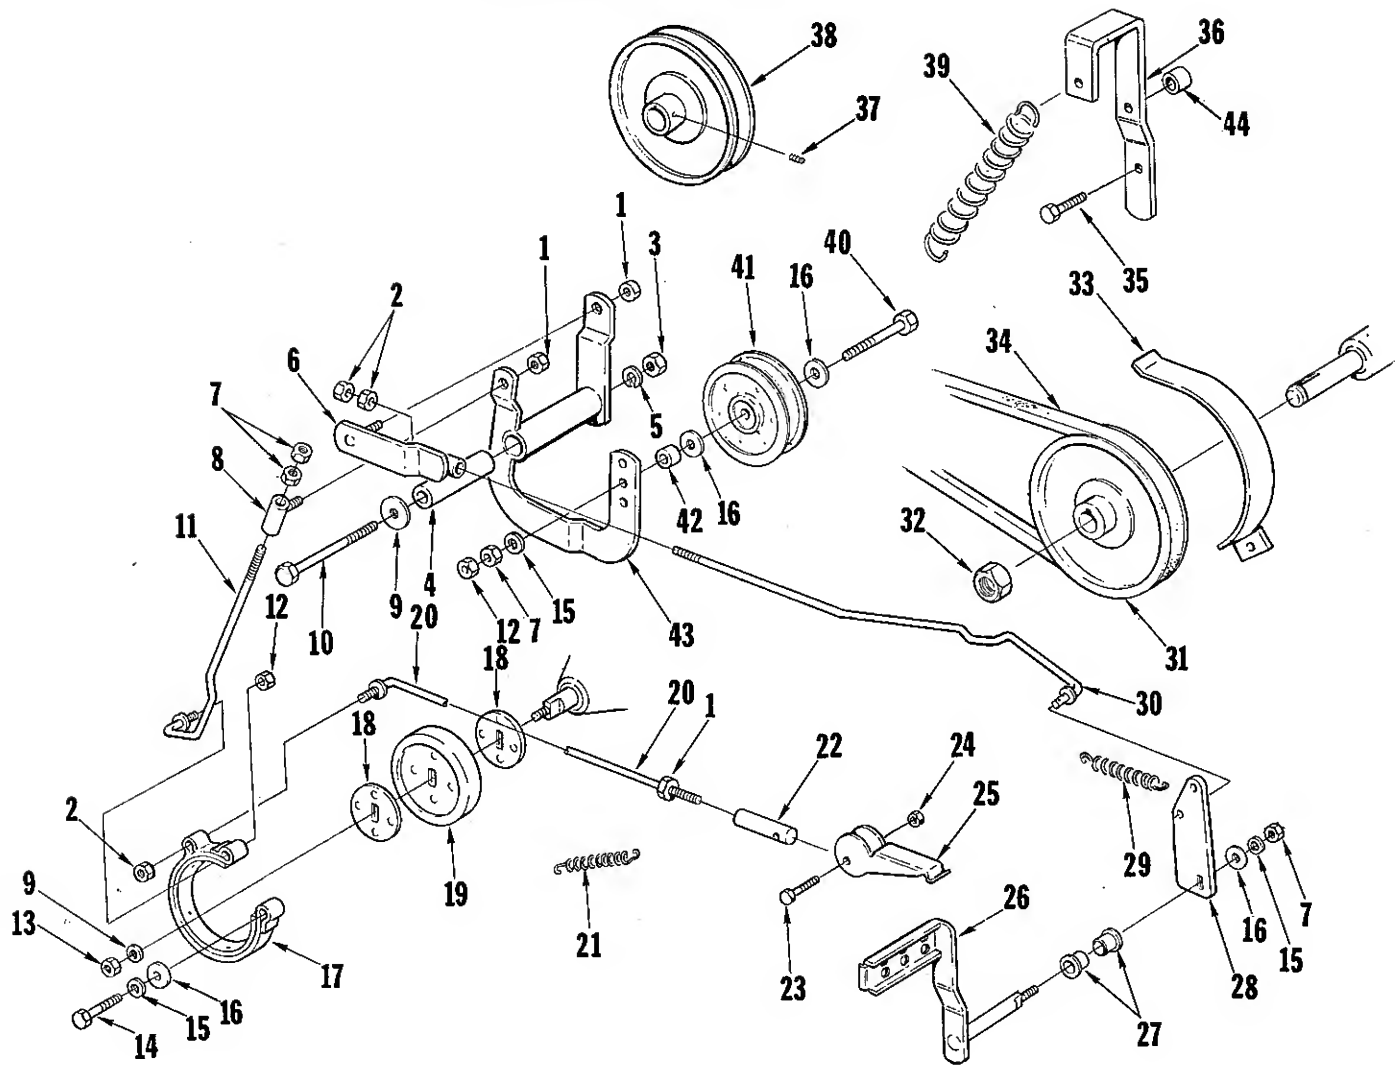


No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	NUT-hex lock, 5/16-18	LM-09233-62	3	23	SCREW-hex hd. cap, 1/4-20 x 1-1/4	LM-09287-45	1
2	NUT-hex fin, 5/16-18	LM-09173-72	3	24	NUT-hex lock, 1/4-20	LM-09233-58	1
3	NUT-hex fin, 7/16-14	LM-09182-13	1	25	LEVER-parking brake	LM-01721-08	1
4	SPACER	LM-01661-30	1	*26	PEDAL ASSEMBLY-foot	LM-01711-78	1
5	WASHER-lock, 7/16	LM-09181-99	1	27	BUSHING-flanged	LM-16104-56	2
6	GUIDE ASSEMBLY-rod	LM-01661-57	1	28	ARM-foot pedal	LM-16064-77	1
7	NUT-hex fin, 3/8-16	LM-09169-50	4	29	SPRING-brake pedal	LM-01591-06	1
8	GUIDE ASSEMBLY-rod	LM-16035-62	1	30	ROD-clutch & Brake	LM-16064-78	1
9	WASHER-flat, 7/16	LM-09184-30	2	31	PULLEY-driver	LM-16062-06	1
10	SCREW-hex hd. cap, 7/16-14 x 3-3/4	LM-09193-67	1	32	NUT-jam lock, 3/4-16	LM-16070-21	1
11	ROD ASSEMBLY-brake	LM-01724-60	1	33	RETAINER ASSEMBLY-belt	LM-16074-57	1
12	NUT-hex lock fin, 3/8-16	LM-09234-28	2	34	BELT-hydrostatic drive	LM-16029-69	1
13	NUT-hex lock, 7/16-14	LM-09240-58	1	35	SCREW-tapping (Taptite), 3/8-16 x 1	LM-09286-96	2
14	SCREW-hex hd. cap, 3/8-16 x 1-3/4	LM-09193-61	1	*36	BRACKET-spring	LM-16082-50	1
15	WASHER-lock, 3/8	LM-09169-65	3	37	SETScrew-5/16-18 x 5/16	LM-09117-12	1
16	WASHER-flat, 3/8	LM-09173-78	4	38	PULLEY-driven	LM-01661-73	1
17	BAND ASSEMBLY-brake	LM-01722-34	1	39	SPRING-idler pulley	LM-16083-95	1
18	WASHER-special	LM-01581-96	2	40	SCREW-hex hd. cap, 3/8-16 x 2-1/4	LM-09193-62	1
19	DRUM-brake	LM-01661-76	1	41	PULLEY-idler	LM-16035-15	1
20	ROD ASSEMBLY-parking brake	LM-16068-17	1	42	SPACER	LM-01570-81	1
21	SPRING	LM-01210-37	1	43	LEVER ASSEMBLY-idler	LM-01661-26	1
22	ROD-end	LM-01719-94	1	44	SPACER	LM-16104-04	1

\* Denotes new parts

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# Clutch, Brake & Dual Range T-10

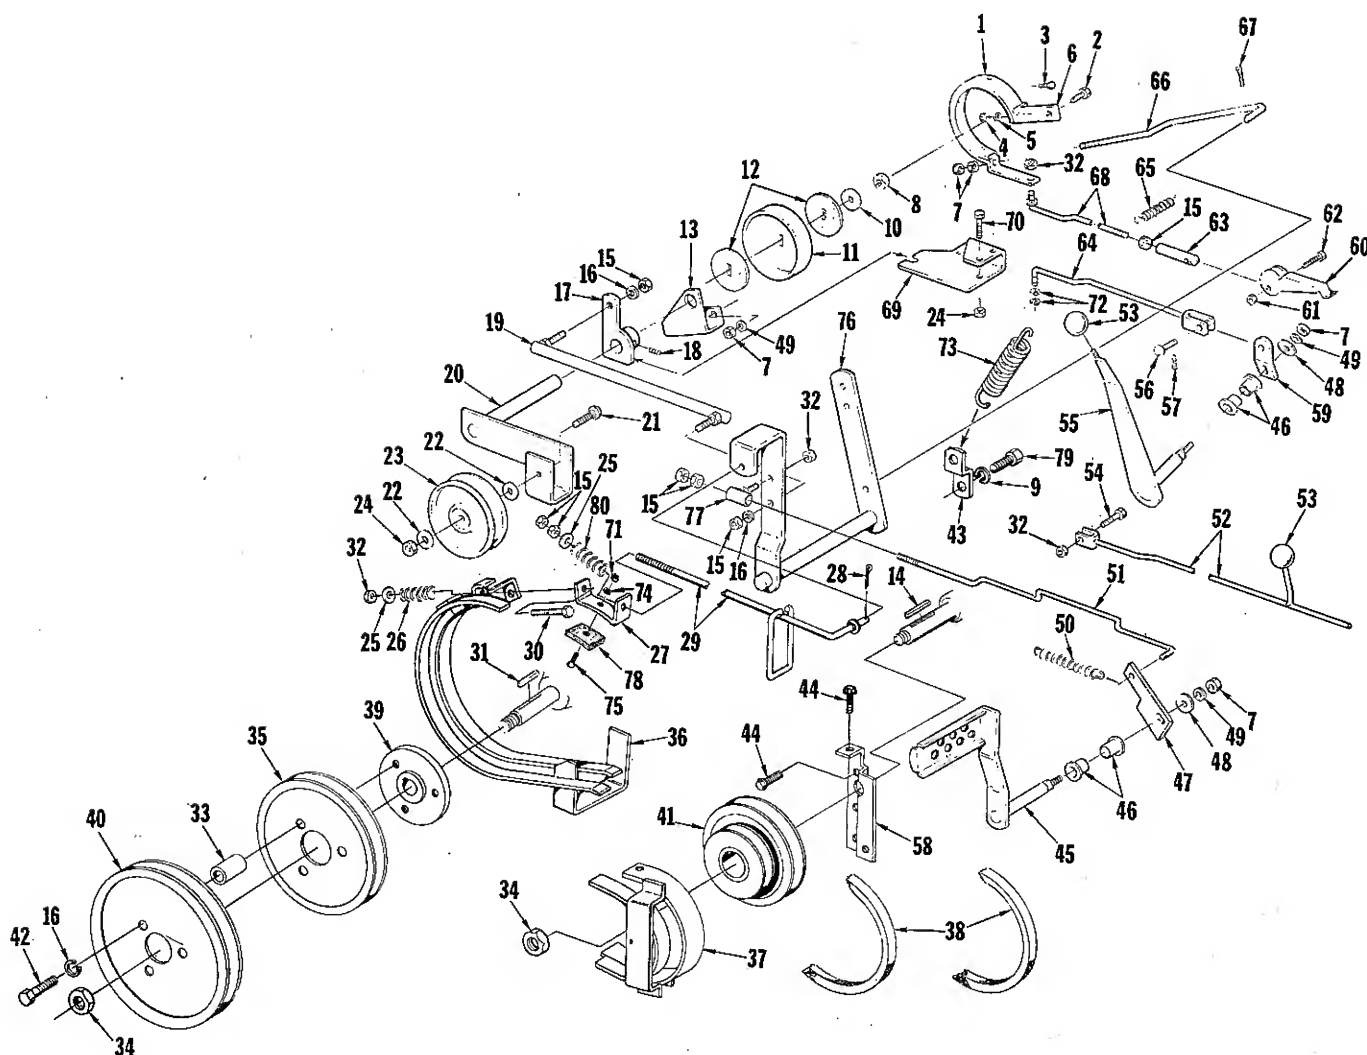

No.	Description	Part No.	Qty.
1	BAND ASSEMBLY-brake	LM-01714-97	1
2	SCREW-hex hd. cap, 3/8-16 x 1-1/4	LM-09174-00	2
3	SCREW-hex hd. cap, 1/4-20 x 3/4	LM-09160-19	2
4	NUT-hex fin, 1/4-20	LM-09166-22	2
5	WASHER-lock, 1/4	LM-09169-64	2
6	BRACKET-brake band	LM-01641-13	1
7	NUT-hex fin, 3/8-16	LM-09169-50	6
8	NUT-lock, 7/16-14	LM-09240-58	1
9	WASHER-lock	LM-09181-99	1
10	WASHER-flat, 5/16	LM-09184-30	1
11	DRUM-brake	LM-01572-82	1
12	WASHER-special	LM-01581-96	2
13	BEARING-idler pivot	LM-16070-27	1
14	KEY-Woodruff, #5	LM-09051-21	1
15	NUT-hex fin, 5/16-18	LM-09173-72	7
16	WASHER-lock, 5/16	LM-09173-56	5
17	LEVER ASSEMBLY-cam shaft	LM-16070-26	1
18	SETSCREW-hex soc, 1/4-20 x 1/4	LM-09057-59	1
19	JOINT-ball, double end	LM-16065-68	1
20	ARM ASSEMBLY-idler	LM-16070-25	1
21	BOLT-rd. hd. sq. nk, 3/8-16 x 1	LM-09232-32	1


ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# Clutch, Brake & Dual Range T-10

No.	Description	Part No.	Qty.
22	WASHER-flat	LM-09246-07	2
23	PULLEY	LM-16065-54	1
24	NUT-hex lock, 3/8-16	LM-09234-28	2
25	WASHER-flat	LM-09176-42	1
26	SPRING	LM-16107-03	1
27	BRAKE-sheave	LM-16105-90	1
28	PIN-cotter	LM-09193-13	1
*29	ROD-pulley brake	LM-16086-21	1
30	SCREW-hex hd. cap, 5/16-18 x 2-1/2	LM-09193-55	1
31	KEY-Hi Pro	LM-09051-23	1
32	NUT-hex lock, 5/16-18	LM-09233-62	4
*33	SPACER	LM-16083-10	3
34	NUT-lock jam, 3/4-16	LM-16070-21	2
*35	SHEAVE	LM-16081-22	1
*36	RETAINER ASSEMBLY-rear	LM-16081-27	1
*37	RETAINER ASSEMBLY, belt	LM-16083-08	1
*38	V-BELT-dual range drive	LM-16079-67	2
*39	HUB-pulley	LM-16083-09	1
*40	SHEAVE	LM-16081-23	1
*41	PULLEY-front	LM-16083-22	1
42	SCREW-hex, 5/16-18 x 2	LM-09193-54	3
*43	CLIP-spring	LM-01748-93	1
44	SCREW-hex washer, 5/16-18 x 1/2	LM-09248-56	3
*45	PEDAL ASSEMBLY-foot	LM-01711-78	1
46	BUSHING-flanged	LM-16104-56	4
47	ARM-foot pedal	LM-16064-77	1
48	WASHER-3/8	LM-09173-78	2
49	WASHER-lock, 3/8	LM-09169-65	4
50	SPRING-break pedal	LM-01591-06	1
51	ROD-clutch & brake	LM-16064-78	1
52	ROD-shift assembly	LM-16064-49	1
53	BALL-shift lever	LM-16010-42	2
54	SCREW-hex hd. cap	LM-09261-50	1
55	LEVER ASSEMBLY	LM-16066-12	1
*56	PIN	LM-16087-02	1
57	PIN-cotter	LM-09184-47	1
*58	SUPPORT-belt retainer	LM-16083-04	1
59	LINK-speed control	LM-16065-48	1
60	LEVER-parking brake	LM-01721-08	1
61	NUT-hex lock, 1/4-20	LM-09233-58	1
62	SCREW-hex hd. cap, 1/4-20 x 1-1/4	LM-09287-45	1
63	END-rod	LM-01719-94	1
64	ROD ASSEMBLY-control	LM-16066-15	1
65	SPRING	LM-01210-37	1
66	ROD-brake	LM-01641-89	1
67	PIN-cotter	LM-09184-48	1
68	ROD ASSEMBLY-parking brake	LM-16069-03	1
69	FORK-shift	LM-16065-67	1
70	SCREW-hex hd. cap, 3/8-16 x 2	LM-09174-02	1
71	NUT-hex, 10-24	LM-09166-21	1
72	"E" RING-external	LM-16027-35	2
*73	SPRING-tension	LM-01748-96	1
74	WASHER-lock, #10	LM-09173-65	1
75	SCREW-flat, 10-24 x 5/8	LM-09262-67	1
*76	LEVER ASSEMBLY-pivot	LM-16083-17	1
77	GUIDE ASSEMBLY-rod	LM-16043-19	1
*78	STRAP-pulley brake	LM-16079-43	1
79	SCREW-hex hd. cap, 7/16-14 x 1-1/4	LM-09206-77	1
80	SPRING	LM-01570-41	1

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# Steering & Front Axle

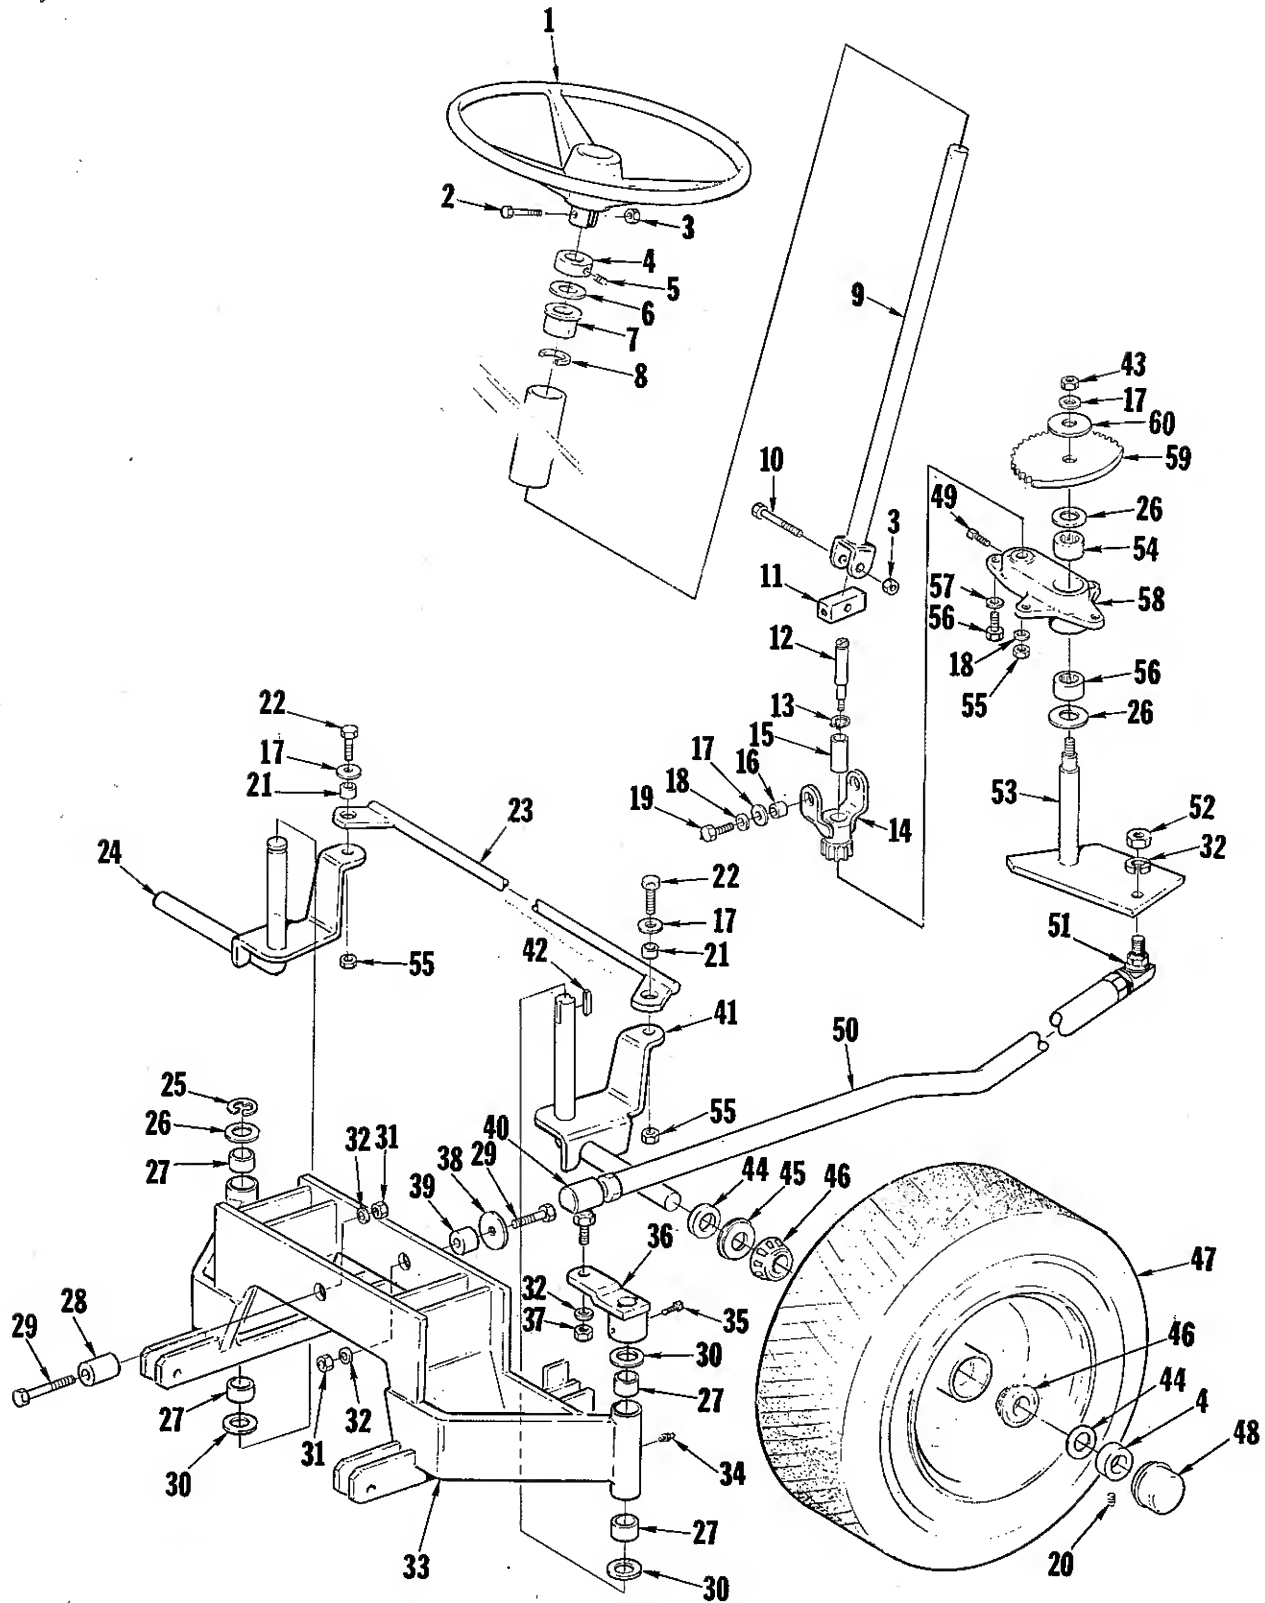

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.




# Steering & Front Axle

No.	Description	Part No.	Qty.
1	WHEEL-steering	LM-16063-42	1
2	SCREW-hex hd. cap, 5/16-18 x 1-1/4	LM-09219-77	1
3	NUT-hex lock, 5/16-18	LM-09233-62	2
4	COLLAR-set	LM-80210-10	3
5	SETSCREW-5/16-18 x 1/4	LM-09117-12	1
6	WASHER-special	LM-16066-91	1
7	BUSHING-steering	LM-01570-77	1
8	RING-snap	LM-01572-41	1
* 9	SHAFT ASSEMBLY-steering	LM-16086-24	1
10	SCREW-hex hd. cap, 5/16-18 x 1-1/2	LM-16013-85	1
11	PIN-Universal joint	LM-01541-53	1
12	PIN-eccentric	LM-01572-53	1
13	RING-retainer	LM-01583-99	1
14	BUSHING ASSEMBLY	LM-01572-54	1
15	Includes: BUSHING	LM-01572-58	1
16	SPACER	LM-01530-81	2
17	WASHER-flat, 3/8	LM-09173-78	5
18	WASHER-lock, 3/8	LM-09169-65	3
19	SCREW-hex hd. cap, 3/8-16 x 3/4	LM-09219-65	2
20	SETSCREW-5/16-18 x 5/16	LM-09296-98	2
21	SPACER	LM-16010-78	2
22	SCREW-cap, 3/8-16 x 1-1/4	LM-09204-15	2
23	ROD-tie	LM-16063-65	1
24	SPINDLE ASSEMBLY-(R. H.)	LM-16063-62	1
25	RING-retaining	LM-09277-94	1
26	WASHER	LM-80610-12	3
27	BEARING	LM-01542-89	4
28	SPACER	LM-16064-03	1
29	SCREW-hex hd. cap, 1/2-13 x 2	LM-09210-24	2
30	WASHER	LM-01081-81	3
31	NUT-hex fin.	LM-09169-51	2
32	WASHER-lock, 1/2	LM-09169-66	4
33	AXLE ASSEMBLY-front	LM-16065-03	1
34	FITTING-lube, straight	LM-09146-87	2
35	SETSCREW-sq. hd., 5/16-18 x 1/2	LM-09230-85	2
36	ARM ASSEMBLY-steering	LM-16066-62	1
37	NUT-hex jam, 1/2-20	LM-09192-62	3
38	WASHER-flat	LM-09243-58	1
39	SPACER	LM-16066-49	1
40	JOINT-ball	LM-01642-72	1
41	SPINDLE ASSEMBLY (L. H.)	LM-16063-63	1
42	KEY	LM-01574-27	2
43	NUT-hex lock, 7/16	LM-09240-58	1
44	SPACER	LM-01713-75	4
45	SEAL	LM-01701-68	2
46	CONE-bearing	LM-01544-86	4
47	WHEEL & TIRE ASSEMBLY-front 16 x 6.50 x 8	LM-16079-61	2
	Includes:		
	WHEEL	LM-16071-33	2
	VALVE & CAP	LM-16010-72	2
	BEARING-cup	LM-16023-19	2
	TIRE-Purchase Locally		2
	TUBE-Purchase Locally		2
48	CAP-hub	LM-01544-87	2
49	SETSCREW	LM-09012-71	1
*50	ROD-drag	LM-16086-32	1
	Includes:		
51	BALL-joint	LM-01642-72	1
52	NUT-jam	LM-09192-62	1
53	ARM ASSEMBLY-steering	LM-16066-11	1
54	NEEDLE BEARING	LM-01542-58	2
55	NUT-hex lock, 3/8-16	LM-09234-28	3
56	SCREW-hex hd. cap, 5/16-18 x 5/8	LM-09193-18	4
57	WASHER-lock, 5/16	LM-09173-56	4
58	BRACKET-steering	LM-01573-02	1
59	GEAR-STEERING	LM-16065-01	1
60	WASHER-arbor	LM-01081-82	1

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# Shuttle Drive

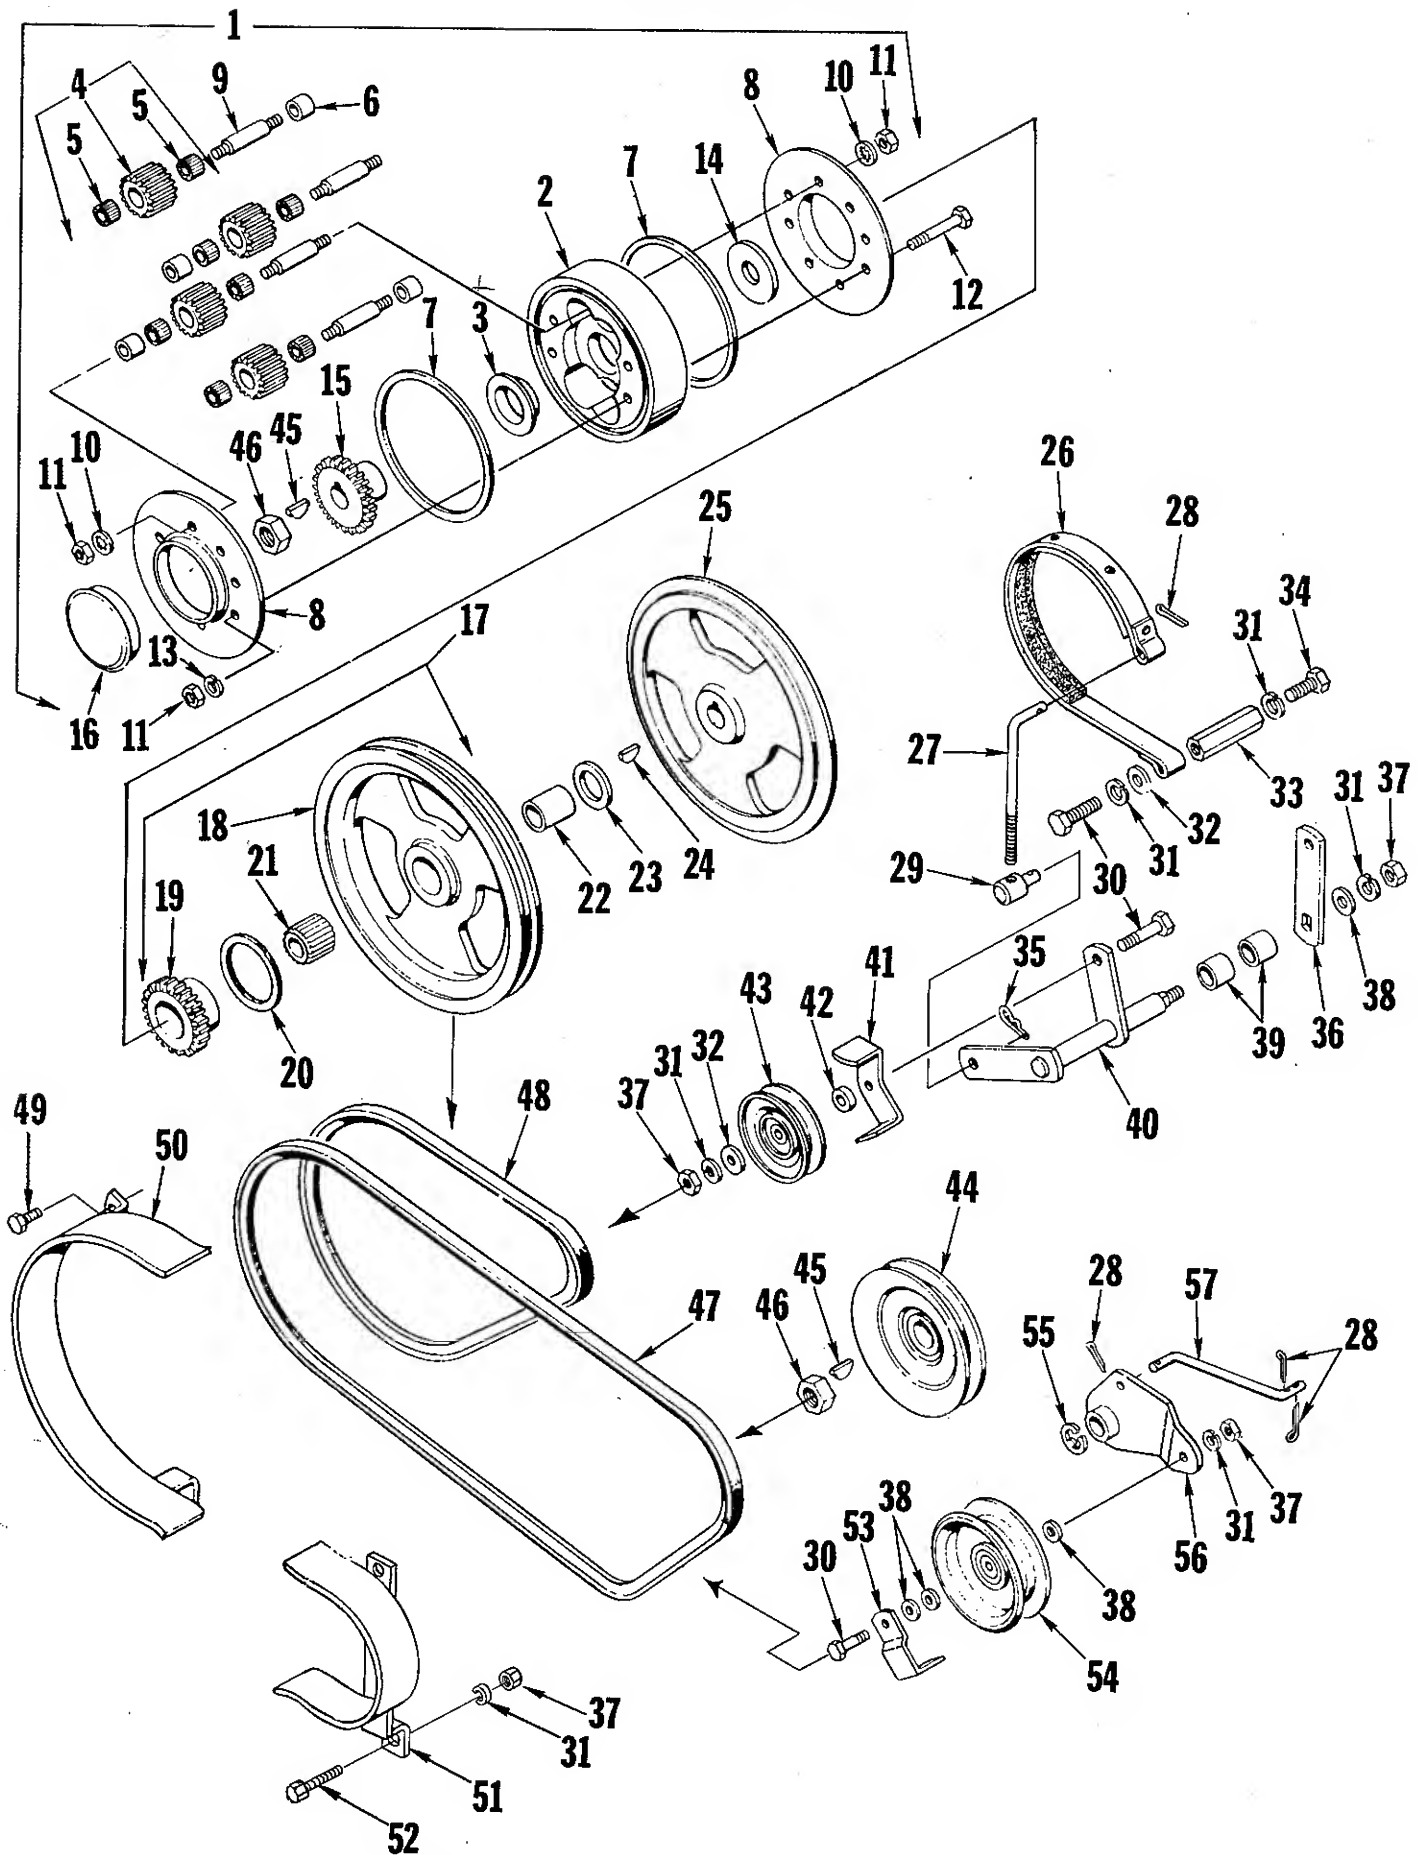


ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# Shuttle Drive

No.	Description	Part No.	Qty.
* 1	PLANETARY ASSEMBLY	LM-01762-56	1
	Includes:		
* 2	PLANETARY CARRIER	LM-01745-86	1
	Includes:		
* 3	BEARING-flanged	LM-01737-89	1
* 4	PINION-differential assembly	LM-01762-57	4
	Includes:		
* 5	BEARING-needle	LM-01745-67	8
* 6	BEARING-sleeve	LM-01745-69	4
* 7	"O" Ring	LM-01743-99	2
* 8	COVER-differential	LM-01744-04	2
* 9	PIN-pinion	LM-01740-25	4
*10	WASHER-lock shakeproof, 5/16	LM-09233-00	8
11	NUT-hex full, 5/16 x 18	LM-09173-72	12
12	SCREW-hex cap, 5/16-18 x 2	LM-09193-54	4
13	WASHER-lock, 5/16	LM-09173-56	4
*14	WASHER-thrust	LM-01742-74	1
*15	GEAR-differential	LM-01757-14	1
*16	CAP-hub	LM-01745-84	1
*17	PULLEY ASSEMBLY	LM-01762-55	1
	Includes:		
*18	PULLEY	LM-01737-94	1
*19	GEAR-sun	LM-01757-12	1
*20	SEAL	LM-01749-81	1
*21	BEARING-roller seal	LM-01745-92	1
*22	INNER-race	LM-01745-68	1
*23	BEARING-thrust	LM-01745-70	1
24	KEY-Woodruff #9	LM-09051-23	1
*25	PULLEY-half	LM-01737-93	1
*26	BRAKE BAND ASSEMBLY	LM-01743-81	1
*27	ROD	LM-01743-85	1
28	PIN-cotter	LM-09184-47	4
29	PIVOT	LM-01081-72	1
30	SCREW-hex cap, 3/8-16 x 1-1/2	LM-09193-60	3
31	WASHER-lock, 3/8	LM-09169-65	6
32	WASHER-plain, 5/16	LM-09176-42	2
*33	BRAKE-anchor	LM-01743-86	1
34	SCREW-hex cap, 3/8-16 x 1	LM-09212-10	1
35	PIN-quick	LM-01067-87	1
*36	LEVER	LM-01744-27	1
37	NUT-hex full, 3/8-16	LM-09169-50	4
38	WASHER-plain, 3/8	LM-09173-78	5
*39	BUSHING	LM-01180-92	2
*40	LEVER ASSEMBLY	LM-01738-64	1
41	GUIDE-belt	LM-01744-02	1
42	SPACER	LM-01748-70	1
43	PULLEY-idler	LM-01745-61	1
*44	PULLEY	LM-01743-59	1
45	KEY-hi pro, 3/16 x 3/4	LM-09221-39	2
46	NUT-jam lock, 3/4-16	LM-16070-21	2
*47	"V" Belt	LM-01747-31	1
*48	"V" Belt	LM-01748-83	1
49	SCREW-Taptite hex hd. 5/16-18 x 1/2	LM-09248-56	2
*50	GUARD ASSEMBLY PULLEY	LM-01743-94	1
*51	GUARD ASSEMBLY-belt	LM-16078-98	1
52	BOLT-carriage, 3/8-16 x 1	LM-09077-31	1
*53	GUIDE-belt	LM-01067-17	1
54	PULLEY	LM-01744-97	1
55	"E" Ring	LM-16021-55	1
*56	LEVER ASSEMBLY IDLER	LM-01738-61	1
*57	LINK-clutch	LM-01640-88	1

\* Denotes new parts

# Shuttle Controls

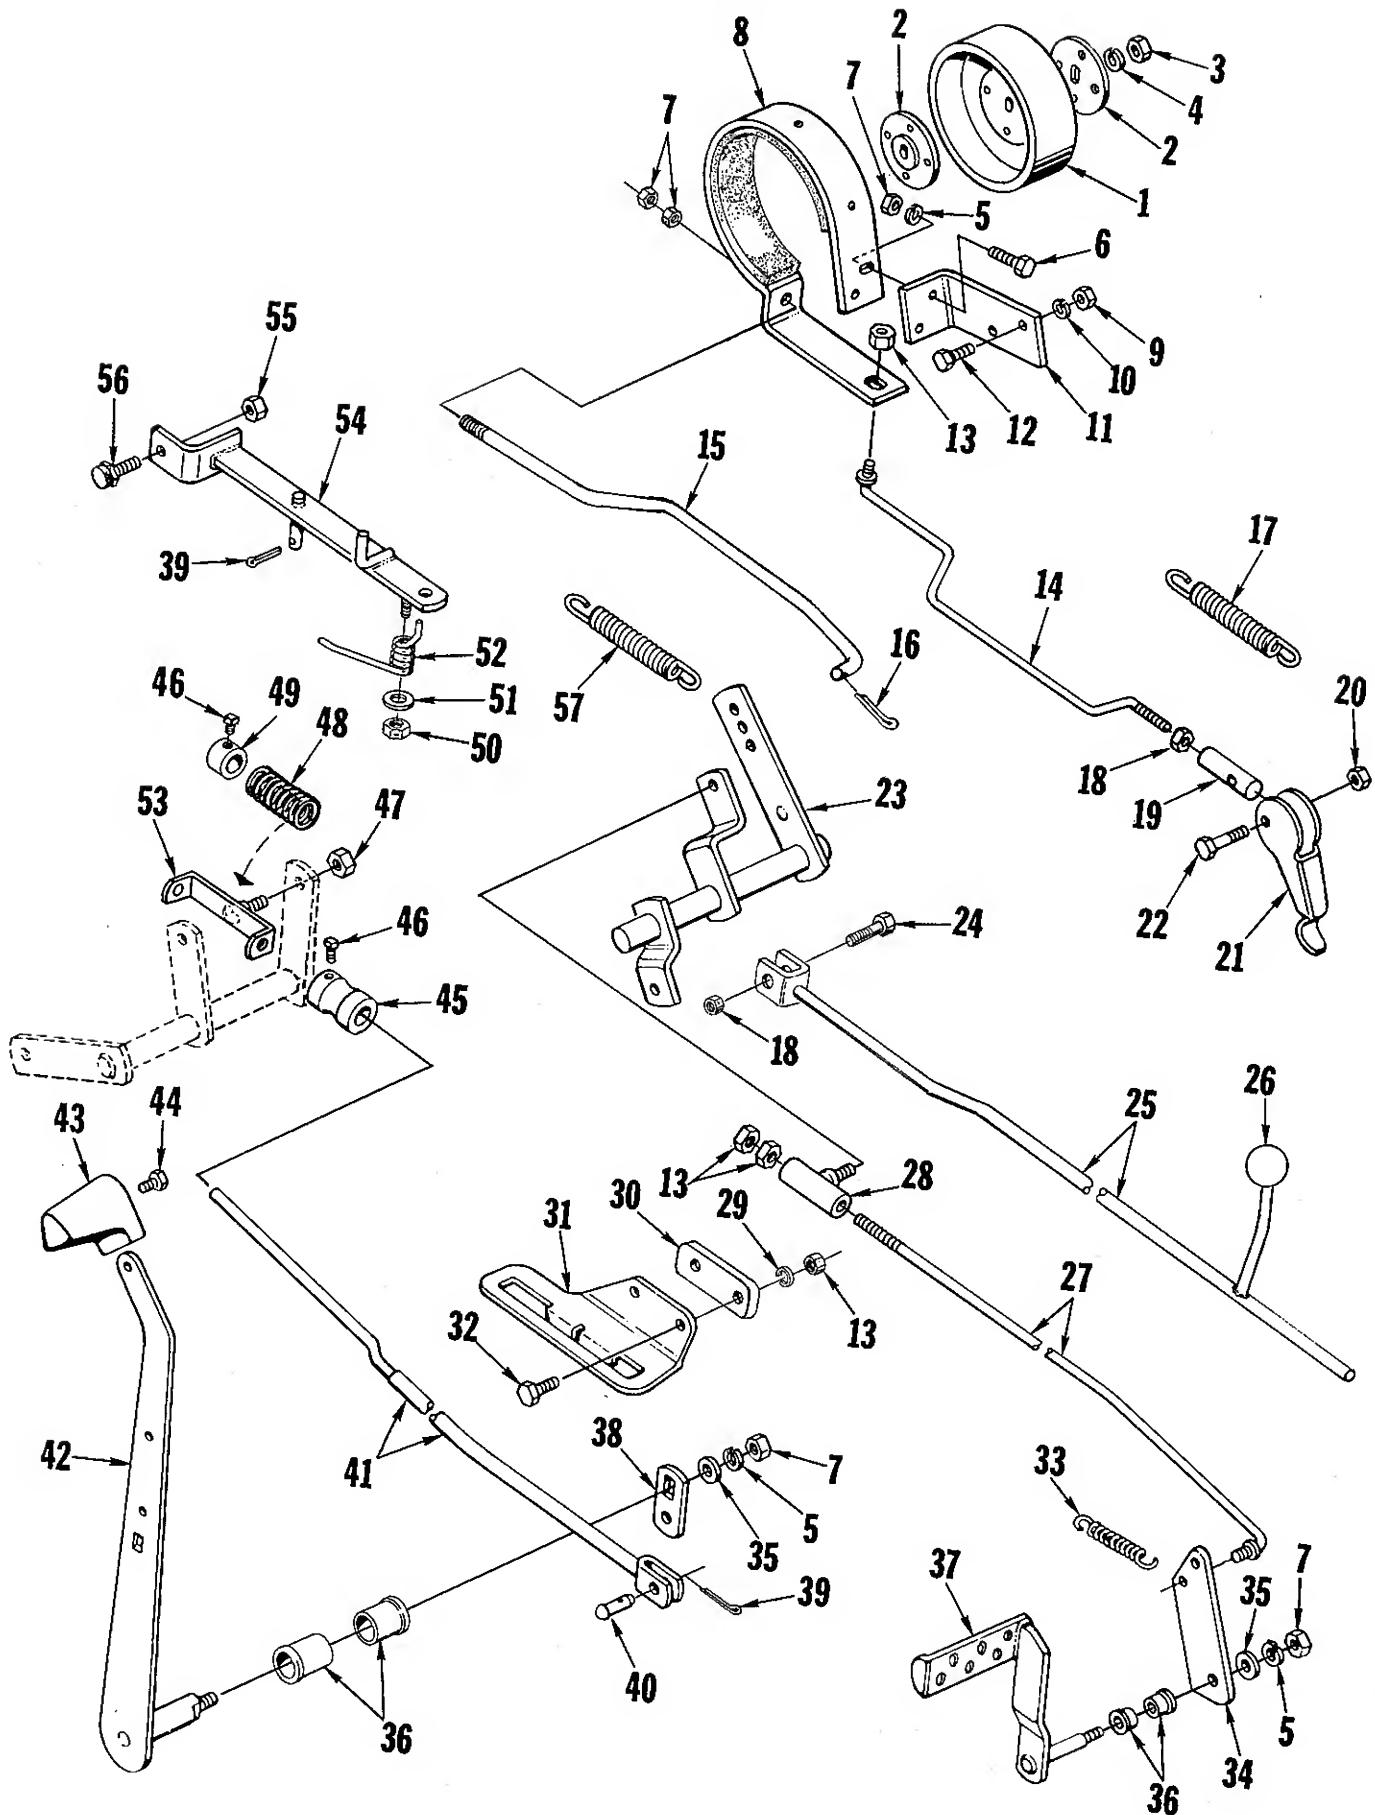


ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# Shuttle Controls

No.	Description	Part No.	Qty.
1	BRAKE DRUM	LM-01572-82	1
2	WASHER-special	LM-01581-96	2
3	NUT-hex, full, 7/16-14	LM-09240-58	1
4	WASHER-lock, 7/16	LM-09184-30	1
5	WASHER-lock, 3/8	LM-09169-65	4
6	SCREW-hex, cap, 3/8-16 x 1	LM-09077-31	2
7	NUT-hex full, 3/8-16	LM-09169-50	4
8	BRAKE BAND ASSY.	LM-01714-97	1
9	NUT-hex full, 1/4-20	LM-09166-22	2
10	WASHER-lock, 1/4	LM-09169-64	2
11	BRACKET-brake band	LM-01641-13	1
12	SCREW-hex cap, 1/4-20 x 3/4	LM-09160-19	2
13	NUT-hex full, 5/16-18	LM-09173-72	5
14	ROD-parking brake	LM-16069-03	1
15	ROD-brake	LM-01641-89	1
16	PIN-cotter	LM-09184-48	1
17	SPRING	LM-01210-37	1
18	NUT-hex full, 5/16-18	LM-09233-62	3
19	ROD END	LM-01719-94	1
20	NUT-hex lock full, 1/4-20	LM-09233-58	1
21	LEVER-parking brake	LM-01721-08	1
22	SCREW-hex cap, 1/4-20 x 1-1/4	LM-09287-45	1
*23	LEVER-pivot	LM-01640-89	1
24	SCREW-hex cap, 5/16-18 x 1-1/2	LM-09261-50	1
25	ROD-shift	LM-16064-49	1
26	KNOB-ball	LM-16010-42	1
*27	ROD ASSY.-clutch & brake	LM-16080-37	1
28	GUIDE-rod assy.	LM-16043-19	1
29	WASHER-lock, 5/16	LM-09173-56	2
30	SPACER-speed control quadrant	LM-16074-15	1
*31	QUADRANT	LM-01744-73	1
32	SCREW-hex hd., 5/16-18 x 3/4	LM-09173-97	2
33	SPRING-tension	LM-01591-06	1
34	ARM-foot pedal	LM-16064-77	1
35	WASHER-plain, 3/8	LM-09173-78	2
36	BUSHING-flanged	LM-16104-56	4
37	FOOT PEDAL ASSEMBLY	LM-01711-78	1
38	LINK	LM-16065-48	1
39	PIN-cotter, 3/32 x 3/4	LM-09184-47	2
*40	PIN	LM-16087-02	1
*41	ROD ASSEMBLY SPEED CONTROL	LM-16081-95	1
42	LEVER ASSEMBLY SPEED CONTROL	LM-01710-72	1
43	KNOB	LM-01711-65	1
44	SCREW-hex self forming	LM-09221-25	1
*45	DETENT-brake	LM-01748-55	1
46	SCREW-set sqr. hd., 1/4-20 x 3/8	LM-09288-04	2
47	NUT-hex full lock, 3/8-16	LM-09234-28	1
48	SPRING	LM-01620-65	1
49	COLLAR-set	LM-16024-35	1
50	NUT-hex jam, 3/8-16	LM-09287-31	1
51	WASHER-5/16	LM-09176-42	1
*52	SPRING	LM-16077-18	1
*53	ROD-guide assembly	LM-01753-35	1
*54	BRAKE-lever assembly	LM-16077-17	1
55	NUT-hex jam, 5/16-18	LM-09201-61	1
*56	PAD-brake	LM-01748-54	1
57	SPRING	LM-01748-96	1

\* Denotes new parts

# Draw Bar Assembly T-16H

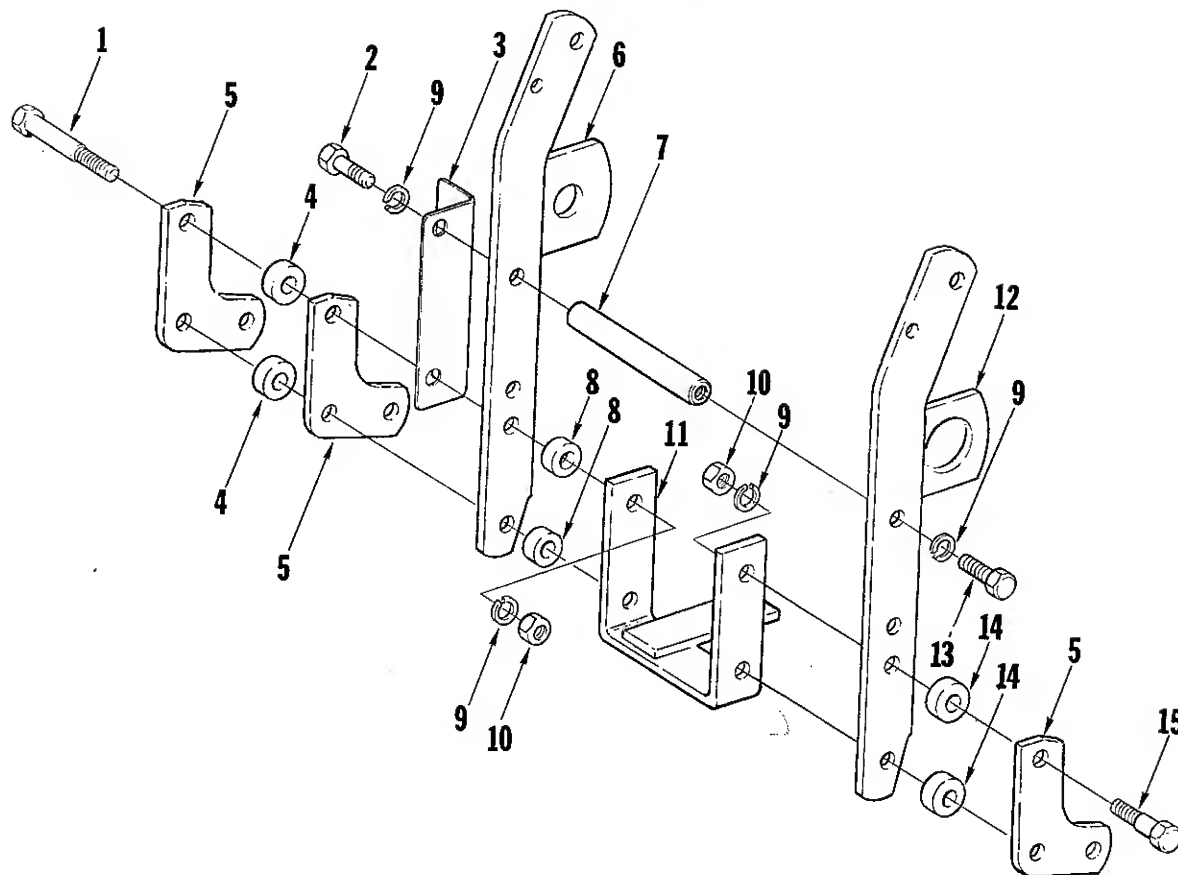

No.	Description	Part No.	Qty.
1	SCREW-hex hd. cap, 7/16-14 x 3	LM-09193-65	2
2	SCREW-hex hd. cap, 7/16-14 x 1-3/4	LM-09166-09	1
3	PLATE-decal	LM-01661-98	1
4	SPACER	LM-01660-76	2
5	PLATE-draw	LM-01660-75	3
6	BAR ASSEMBLY-upright	LM-01662-06	1
7	SPACER	LM-01661-10	1
8	SPACER	LM-16066-41	2
9	WASHER-lock, 7/16	LM-09181-99	6
10	NUT-hex, 7/16-14	LM-09182-13	4
11	DRAWBAR ASSEMBLY	LM-16066-38	1
12	BAR ASSEMBLY-upright	LM-01660-72	1
13	SCREW-hex hd. cap, 5/16-14 x 1-1/4	LM-09164-32	1
14	SPACER	LM-16066-42	2
15	SCREW-hex hd. cap, 7/16-14 x 2-1/4	LM-09193-64	2

\* Denotes new parts

Description	Part No.	T-10	T-16S	T-16H	Qty.	Description	Part No.	T-10	T-16S	T-16H	Qty.
*FILM-shift	LM-01762-99				x 1	*DECAL-hydrostatic	LM-16072-89				x 2
*PLATE-safety	LM-16082-02		x		1	DECAL-T-10	LM-16075-50	x			3
PAINT-spray can (blue) 12 oz.	24764	x	x	x		*DECAL-T-16	LM-16081-56		x	x	3
PAINT-spray can (white) 12 oz.	24765	x	x	x		*DECAL-instrument panel	LM-16082-99	x			1
PAINT-spray can (black) 12 oz.	22772	x	x	x		*DECAL-instrument panel	LM-16082-03		x		1
*PAINT-safety w/shift pattern	LM-16082-98	x			1	*DECAL-instrument panel	LM-16081-46			x	1
*PAINT-safety w/shift pattern	LM-16084-97			x	1	*DECAL-caution	LM-16081-48	x	x	x	1
PLAQUE-hood (R. H.)	LM-16075-49	x	x	x	1	DECAL-parking brake	LM-01728-16	x	x	x	1
PLAQUE-hood (L. H.)	LM-16075-48	x	x	x	1	*DECAL-quadrant	LM-16081-55			x	1
PLAQUE-grille	LM-16075-47	x	x	x	1	FILM-inst. (clutch & brake)	LM-01749-24	x	x	x	1
STUD RECEIVER-push on	LM-16076-22	x	x	x	13						
*DECAL-shuttle	LM-16086-25		x		2						

\* Denotes new parts

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

Part No.	Description	Qty.	Part No.	Description	Qty.	Part No.	Description	Qty.	Part No.	Description	Qty.
LM 01065 82	Gasket-felt	8	LM 01562 09	Grip-lift lever	1	LM 01660 83	Rod Assembly	1	*LM 01738 59	Plate-side	1
*LM 01067 17	Guide-belt	1	LM 01570 41	Spring	1	LM 01660 88	Turnbuckle	1	*LM 01738 61	Lever Assembly	1
LM 01067 87	Pin-quick	1	LM 01570 77	Bushing-steering	1	LM 01660 89	Rod Assembly	1	*LM 01738 64	Lever Assembly	1
LM 01071 35	Spring	1	LM 01570 81	Spacer	1	LM 01660 92	Link Assembly	1	LM 01739 66	Shaft-driven	1
LM 01081 34	Ring-retaining	1	LM 01570 91	Bar-pull	1	LM 01660 95	Shaft Assembly	1	*LM 01743 38	Shaft-pulley	1
LM 01081 72	Pivot	1	LM 01570 94	Connector	2	LM 01660 97	Unit Assembly	1	*LM 01743 59	Pulley	1
LM 01082 02	Bearing	1	LM 01571 02	Arm-belt	1	LM 01661 03	Cover-gearcase	1	*LM 01740 25	Pin-pinion	4
*LM 01180 92	Bushing	2	LM 01571 20	Key-drive	2	LM 01661 05	Case-gear	1	LM 01740 32	Plate-side (R. H.)	1
LM 01181 17	Seal-oil	2	LM 01571 94	Pin	1	LM 01661 10	Spacer	1	LM 01740 33	Plate-side (L. H.)	1
LM 01210 37	Spring	2	LM 01572 41	Ring-snap	1	LM 01661 11	Deck Assembly	1	*LM 01742 28	Pinion	1
LM 01210 83	Spindle-pinion	8	LM 01572 53	Pin-eccentric	1	LM 01661 14	Shroud Assembly	1	*LM 01742 34	Gear-2nd & 4th	1
LM 01210 84	Spacer	2	LM 01572 54	Bushing Assembly	1	LM 01661 26	Lever Assembly	1	*LM 01743 81	Brake Band Assy.	1
LM 01210 87	Spring	1	LM 01572 58	Bushing	1	LM 01661 30	Spacer	1	*LM 01743 85	Rod	1
LM 01211 90	Seal-differential	1	LM 01572 82	Drum-brake	2	LM 01661 34	Deflector-cooler	1	*LM 01743 86	Brake-anchor	1
LM 01221 43	Insulation-fuel	1	LM 01572 90	Shaft	1	LM 01661 35	Cooler-oil	1	*LM 01743 94	Guard Assembly	1
LM 01221 64	Bulb	2	LM 01573 02	Bracket-steering	1	LM 01661 36	Hose-hydraulic	1	*LM 01743 99	"O" Ring	2
LM 01221 75	Lamp Assembly	2	LM 01573 15	Bracket-throttle	1	LM 01661 37	Hose-hydraulic	1	LM 01744 02	Guide-belt	1
LM 01221 84	Switch-toggle	1	LM 01574 27	Key-drive	3	LM 01661 38	Hose-hydraulic	2	*LM 01744 04	Cover-differential	2
LM 01221 93	Regulator-voltage	1	LM 01575 16	Case	1	LM 01661 39	Insert-beaded	2	*LM 01744 27	Lever	1
LM 01222 01	Switch	1	LM 01575 19	Bearing-needle	3	LM 01661 40	Reservoir	1	LM 01744 73	Quadrant	1
LM 01222 16	Solenoid	1	LM 01575 20	Bearing-needle	1	LM 01661 47	Element-filter	1	LM 01744 97	Pulley	1
LM 01222 33	Switch-safety	1	LM 01576 19	Seal-oil	2	LM 01661 57	Guide Assembly	1	LM 01745 61	Pulley-idler	1
LM 01222 36	Motor-generator	1	LM 01576 20	Bearing	4	LM 01661 60	Clip-spring	1	*LM 01745 67	Bearing-needle	8
LM 01222 82	Connector	1	LM 01576 24	Set-collar	4	LM 01661 65	Cap-plug	1	*LM 01745 68	Inner-race	1
LM 01520 06	Spring	1	LM 01576 25	Lever Assembly	2	LM 01661 71	Spring	1	*LM 01745 69	Bearing-sleeve	4
LM 01530 68	Bearing	2	LM 01583 99	Ring-retainer	1	LM 01661 73	Pulley-driven	1	*LM 01745 70	Bearing-thrust	1
LM 01530 81	Spacer	2	LM 01585 79	Pinion-diff.	8	LM 01661 76	Drum-brake	1	*LM 01745 82	Gearcase	1
LM 01540 40	Plate-bearing	1	LM 01591 06	Spring-brake	3	LM 01661 78	Ball-shift	1	*LM 01745 84	Cap-hub	1
LM 01540 65	Collar-axle	2	LM 01591 29	Key	1	LM 01661 98	Plate-decal	1	*LM 01745 86	Planetary	1
LM 01540 67	Shaft-shifter	1	LM 01620 65	Spring	1	LM 01662 06	Bar Assembly	1	*LM 01745 92	Bearing-roller	1
LM 01540 68	Shaft	1	LM 01620 85	Spring	8	LM 01701 68	Seal	2	*LM 01745 47	"V" Belt	1
LM 01540 69	Fork-shift	2	LM 01640 29	Bracket-front	1	*LM 01702 78	Wheel	2	*LM 01748 54	Pad-brake	1
LM 01540 72	Pinion Assembly	1	LM 01640 51	Gear	1	LM 01710 72	Lever Assembly	2	*LM 01748 55	Detent-brake	1
LM 01540 75	Pinion Assembly	1	LM 01640 62	Pinion	1	LM 01711 65	Knob	2	LM 01748 70	Spacer	1
LM 01540 78	Gear-driven	1	LM 01640 64	Ring-retaining	1	*LM 01711 78	Pedal Assembly	3	*LM 01748 83	"V" Belt	1
LM 01540 79	Pinion	1	*LM 01640 88	Link-clutch	1	LM 01712 95	Indicator	1	*LM 01748 93	Clip-spring	2
LM 01540 80	Pinion-driven	1	*LM 01640 89	Lever-pivot	1	LM 01713 34	Choke	1	*LM 01748 96	Spring-tension	2
LM 01540 81	Gear-driven	1	LM 01641 13	Bracket-brake	2	LM 01713 75	Spacer	4	*LM 01749 81	Seal	1
LM 01540 82	Spacer	1	LM 01641 89	Rod-brake	2	LM 01714 29	Quadrant-speed	1	*LM 01757 12	Gear-sun	1
LM 01540 84	Spacer	1	LM 01642 17	Carrier-diff.	1	LM 01714 32	Clamp-stop	1	*LM 01757 14	Gear-differential	1
LM 01540 86	Shaft-2nd	1	LM 01642 19	Gear-differential	1	LM 01714 97	Band Assembly	2	*LM 01762 34	Fork-shift	1
LM 01540 87	Gear	1	LM 01642 22	Tube & Bushing	1	LM 01715 17	Ring-spacer	2	*LM 01762 36	Pinion & Gear	1
LM 01540 89	Gear	1	LM 01642 24	Bushing	3	LM 01715 19	Hut Assembly	1	*LM 01762 38	Shaft Assembly	1
LM 01540 90	Spacer	1	LM 01642 26	Cover	1	LM 01715 26	Axle-rear	1	*LM 01762 39	Shaft-shift	1
LM 01540 91	Shaft	1	LM 01642 34	Gasket-gear case	1	LM 01715 93	Lever Lift	1	*LM 01762 42	Flange-drive	1
LM 01540 92	Pinion	1	LM 01642 49	Cover-housing	1	LM 01716 79	Guide Assembly	1	*LM 01762 44	Key	1
LM 01540 95	Gear-drive	1	LM 01642 50	Rod-shift	1	LM 01717 87	Seal-oil	1	*LM 01762 45	Gear	1
LM 01540 96	Key	4	LM 01642 51	Support-switch	1	LM 01717 90	Shim	5	*LM 01762 46	Brake-shaft	1
LM 01540 98	Spacer	1	LM 01642 72	Joint-ball	2	LM 01717 91	Shim	1	*LM 01762 55	Pulley Assembly	1
LM 01541 53	Pin	1	LM 01642 84	Arm Assembly	1	LM 01717 92	Spacer-pulley	1	*LM 01762 56	Planetary Assy.	1
LM 01542 03	Bar-draw	1	LM 01642 94	Key	1	LM 01717 96	Gear-bevel	1	*LM 01762 57	Pinion	4
LM 01542 08	Hub-wheel	1	LM 01643 04	Arm Assembly	1	LM 01717 97	Housing	1	*LM 01762 99	Film-shift	1
LM 01542 26	Spacer	1	LM 01650 73	Clip-speed	1	LM 01718 11	Cable-battery	1	*LM 01769 31	Bracket-voltage	1
LM 01542 27	Button-thumb	1	LM 01650 74	Clip-speed	7	LM 01718 53	Cover-diff'l.	1	*LM 01769 46	Hub Assembly	1
LM 01542 57	Bearing-needle	2	LM 01660 03	Pinion-motor	1	LM 01718 54	Cover-diff'l.	1	*LM 01769 80	Ring-retainer	2
LM 01542 58	Bearing-needle	3	*LM 01660 05	Pinion	1	LM 01718 80	Strap-muffler	1	*LM 01770 41	Gear-differential	1
LM 01542 59	Bearing-needle	4	LM 01660 06	Gear-drive	1	LM 01719 94	Rod-end	3	*LM 01725 01	Key-Hi Pro	2
LM 01542 61	Stem-shift	1	LM 01660 12	Shaft	1	LM 01720 61	Clamp-muffler	1	LM 09016 52	Plug-pipe	2
LM 01542 62	Ball-shift lock	3	LM 01660 17	Ring-retaining	1	LM 01721 08	Lever-parking	1	LM 09016 53	Plug-pipe	6
LM 01542 63	Seal-oil	1	LM 01660 18	Bearing-needle	2	LM 01721 63	Harness	1	LM 09017 23	Elbow-street	3
LM 01542 64	Ring-retaining	2	LM 01660 19	Bearing-needle	1	LM 01721 95	Elbow & Nipple	1	LM 09051 21	Key-woodruff	1
LM 01542 66	Ring-retaining	2	LM 01660 20	"O" Ring	1	LM 01722 06	Ring-retaining	2	LM 09051 23	Key	5
LM 01542 67	Key	1	LM 01660 21	Seal-oil	1	LM 01722 34	Hand Assembly	1	LM 09058 58	Key	1
LM 01542 68	Ring-snap	4	LM 01660 22	Fan-pulley	1	LM 01722 56	Bearing-ball	2	LM 09102 24	Key-woodruff	2
LM 01542 69	Seal	4	LM 01660 24	"O" Ring	2	LM 01722 64	Flange	1	LM 09128 08	Fitting-lube	2
LM 01542 71	Bearing-needle	2	LM 01660 26	"O" Ring	1	LM 01723 29	Spacer	2	LM 09146 87	Fitting-lube	2
LM 01542 79	Bearing-needle	2	LM 01660 29	Stem-shift	1	LM 01724 34	Clip-cable	2	LM 09150 19	Fitting-grease	1
LM 01542 82	Gasket	1	LM 01660 40	Spacer	1	LM 01724 36	Cable Clip	1	LM 09169 37	Pin-spring	1
LM 01542 89	Bushing	4	LM 01660 41	Spacer	1	LM 01724 60	Rod Assembly	1	LM 09181 13	Pin-roll	3
LM 01542 91	Ring-retaining	1	LM 01660 43	Gasket-gearcase	1	LM 01727 25	Pulley	2	LM 09183 90	Pin-roll	2
LM 01543 23	Spring	3	LM 01660 44	Clamp-hose	8	LM 01724 44	Strap-rubber	2	LM 09211 33	Fitting-lube	1
LM 01543 26	Plug-pipe	1	LM 01660 47	Spring	1	LM 01727 50	Shaft-driver	1	LM 09213 46	Key-parallel	6
LM 01543 52	Pin Assembly	1	LM 01660 63	Spacer	1	LM 01727 52	Gear-bevel	1	LM 09221 39	Key-Hi Pro	2
LM 01543 54	Key	1	LM 01660 66	Tube Assembly	1	LM 01728 16	Decal-parking	1	LM 09235 48	"O" Ring	1
LM 01543 72	Clamp-hose	4	LM 01660 72	Bar Assembly	1	LM 01730 26	Coupling	2	LM 09253 07	Clip-closed	3
LM 01544 86	Wheel & Tire	2	LM 01660 75	Plate-draw	3	LM 01730 39	Latch-lift lever	1	LM 09277 94	"E" Ring	1
LM 01544 87	Cap-hub	2	LM 01660 76	Spacer	4	LM 01732 06	Filter-fuel	1	LM 09283 56	Key-Hi Pro	2
LM 01545 37	Roll Pin	1	LM 01660 78	Spacer	1	*LM 01737 89	Bearing-flanged	1	LM 09287 12	Key-parallel	1
LM 01545 38	Roll Pin	1	LM 01660 79	Joint-ball	1	*LM 01737 93	Pulley-half	1	LM 16010 42	Knob-ball	3
*LM 01545 83	Plug-expansion	1	LM 01660 80	Cover-reservoir	1	*LM 01737 94	Pulley	1	LM 16010 72	Valve, Stem, & Cap	2
						*LM 01738 07	Shaft-pulley	1	LM 16010 78	Spacer	2

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

Part No.	Description	Qty.	Part No.	Description	Qty.	Part No.	Description	Qty.	Part No.	Description	Qty.
LM 16012 43	Cable-battery	1	LM 16070 27	Bearing-idler	1	LM 01081 81	Washer-special	3	LM 09192 62	Nut-1/2-20	5
LM 16021 02	Grommet-rubber	3	LM 16071 33	Wheel	2	LM 01081 82	Washer	1	LM 09193 13	Pin-cotter	1
LM 16021 55	"E" Ring	3	LM 16070 37	Shaft Assembly	1	LM 01084 72	Washer-special	5	LM 09193 18	5/16-18 x 5/8	11
LM 16023 19	Cup-bearing	2	LM 16071 83	Screen-grille	1	LM 01222 34	Nut-hex	1	LM 09193 19	5/16-18 x 7/8	1
LM 16023 39	Stem, Valve & Cap	1	LM 16072 42	Switch-toggle	1	LM 01222 35	Nut-9/16-24	1	LM 09193 54	5/16-18 x 2	11
LM 16024 35	Collar-set	1	LM 16072 43	Switch-toggle	1	LM 01231 44	Washer	1	LM 09193 55	5/16-18 x 2-1/2	1
LM 16027 24	Cap-fuel	1	LM 16072 44	Light-pilot	1	LM 01540 26	Washer	1	LM 09193 60	3/8-16 x 1-1/2	6
LM 16032 35	"E" Ring	2	*LM 16072 89	Decal-hydrostatic	2	LM 01540 35	Washer-axle	2	LM 09193 61	3/8-16 x 1-3/4	1
LM 16029 69	Belt-hydrostatic	1	LM 16073 23	Belt-generator	1	LM 01540 38	Washer	1	LM 09193 62	3/8-16 x 2-1/4	1
LM 16031 04	Clip-throttle	1	LM 16073 36	Decal-Wheel	4	LM 01540 97	Washer	5	LM 09193 64	7/16-14 x 2-1/4	2
LM 16032 49	Key-ignition	1	LM 16073 42	Clamp	1	LM 01541 30	Washer-axle	2	LM 09193 65	7/16-14 x 3	2
LM 16032 78	Latch-hood	2	LM 16073 43	Clamp	1	LM 01542 77	Washer-axle	1	LM 09193 67	7/16-14 x 3-3/4	1
LM 16033 34	Actuator-electric	1	LM 16073 57	Label	1	LM 01542 81	5/16-18 x 3/4	1	LM 09193 81	Washer-11/32 x 1	1
LM 16035 15	Pulley-idler	1	LM 16073 60	Battery	1	LM 01543 25	Washer	1	LM 09199 29	1/4-20 x 2	2
LM 16035 49	Plug	1	LM 16073 72	Lead-switch	1	LM 01543 78	Nut-lock	1	LM 09204 15	3/8-16 x 1-1/4	8
LM 16035 62	Guide Assembly	1	LM 16074 15	Spacer-speed	2	LM 01544 62	Washer	1	LM 09201 61	Nut-5/16-18	2
LM 16036 18	Cable-solenoid	1	LM 16074 57	Retainer Assy.	1	LM 01572 15	Bolt-eye	1	LM 09202 63	Nut-5/16-24	2
LM 16043 19	Guide Assembly	2	LM 16075 47	Plaque-grille	1	LM-01574 24	Washer-special	14	LM 09204 38	Nut-5/16-24	1
LM 16044 40	Boot-rubber	1	LM 16075 48	Plaque-hood	1	LM 01581 96	Washer-special	6	*LM 09206 76	Screw-hex	21
LM 16044 51	Speed Clip	1	LM 16075 49	Plaque-hood	1	LM 01660 13	Washer	3	LM 09206 77	7/16-14 x 1-1/4	7
LM 16045 56	Rivet-pop	4	LM 16075 50	Decal	3	LM 01660 16	Washer	2	LM 09210 24	1/2-13 x 2	2
LM 16060 49	Plate-side	1	LM 16076 22	Stud-receiver	13	LM 01660 51	Bolt-shoulder	1	LM 09212 10	3/8-16 x 1	3
LM 16062 06	Pulley-driver	1	*LM 16076 48	Quadrant	1	LM 01661 50	Washer	1	LM 09213 32	5/16-18 x 3/4	2
LM 16062 07	Bevel Gear Box	1	*LM 16077 17	Brake-lever	2	LM 01661 61	Washer-nylon	1	LM 09213 33	5/16-18 x 1	4
LM 16063 42	Wheel-steering	1	*LM 16077 18	Spring	1	LM 01661 67	Washer	1	LM 09219 65	3/8-16 x 3/4	2
LM 16063 62	Spindle Assembly	1	LM 16078 70	Stop-seat deck	2	LM 01715 15	Washer-axle	5	LM 09219 69	3/8-16 x 1-1/2	2
LM 16063 65	Rod Assembly	1	*LM 16078 98	Guard Assembly	1	*LM 01722 41	Bolt-5/16-18 x 1	1	LM 09219 72	3/8-16 x 2-1/2	8
LM 16063 63	Spindle Assembly	1	*LM 16079 43	Strap-pulley	1	LM 01724 55	3/8-16 x 1-5/16	1	LM 09219 77	5/16-18 x 1-1/4	1
LM 16063 67	Support Assembly	1	*LM 16079 56	Wheel & Tire	2	LM 01727 53	Washer	1	LM 09219 80	5/16-24 x 5/8	1
LM 16063 79	Hood Assembly	1	*LM 16079 58	Wheel & Tire	2	*LM 01729 77	Washer	2	LM 09221 03	5/16-18 x 3-1/2	1
LM 16064 03	Spacer	1	LM 16079 61	Wheel & Tire	2	*LM 01729 78	Washer	7	LM 09221 10	3/8-16 x 3/4	2
LM 16064 08	Rest-foot (L. H.)	1	*LM 16079 67	"V" Belt	2	*LM 01729 79	Washer	4	LM 09221 25	1/4-20 x 7/8	2
LM 16064 09	Rest-foot (R. H.)	1	*LM 16079 86	Seat	2	*LM 01729 81	Washer	1	*LM 09221 32	Nut-3/8-24	1
LM 16064 12	Muffler-exhaust	1	*LM 16080 37	Rod	1	*LM 01729 82	Washer	1	LM 09221 92	Washer-flat	1
LM 16064 30	Clip-cable	2	*LM 16080 83	Panel Assembly	1	*LM 01742 74	Washer-thrust	1	LM 09226 11	Washer	2
LM 16064 31	Shaft Assembly	2	*LM 16080 89	Support Assembly	1	LM 09012 71	1/4-20 x 3/4	1	LM 09227 11	Washer-#10	6
LM 16064 45	Bearing-sleeve	2	*LM 16081 06	Support Assembly	1	LM 09028 70	Screw-set	1	LM 09227 55	Washer-flat	2
LM 16064 47	Panel-side (L. H.)	1	LM 16081 08	Frame Assembly	1	LM 09057 59	1/4-20 x 1/4	1	LM 09228 54	5/16 x 5/8	1
LM 16064 48	Panel-side (R. H.)	1	*LM 16081 22	Sheave	1	LM 09077 27	1/4-20 x 5/8	6	LM 09228 58	Nut-5/16-18	6
LM 16064 49	Rod-shift	2	*LM 16081 23	Sheave	1	LM 09077 29	5/16-18 x 1-1/4	2	LM 09230 85	5/16-18 x 1/2	2
LM 16064 61	Cover Assembly	1	*LM 16081 27	Retainer Assy.	1	LM 09077 31	3/8-16 x 1	5	LM 09232 12	Washer-#10	1
LM 16064 69	Spacer-pulley	2	*LM 16081 46	Decal-instrument	1	LM 09081 27	3/8-16 x 3/4	11	LM 09232 32	3/8-16 x 1	1
LM 16064 77	Arm-foot	3	*LM 16081 48	Decal-caution	1	LM 09082 95	1/4-20 x 1/2	1	*LM 09233 00	Washer-5/16	8
LM 16064 78	Rod-clutchhand	2	*LM 16081 55	Decal-quadrant	1	LM 09117 12	5/16-18 x 5/16	10	LM 09233 58	Nut-1/4-20	4
LM 16065 01	Gear-steering	1	*LM 16081 56	Decal	3	LM 09160 19	1/4-20 x 3/4	4	LM 09233 62	Nut-5/16-18	12
LM 16065 03	Axle Assembly	1	*LM 16081 93	Hose-fuel	2	LM 09160 79	10-24 x 3/8	5	LM 09234 28	Nut-3/8-16	22
LM 16065 10	Spacer	1	LM 16081 95	Rod Assembly	1	LM 09164 31	5/16-18 x 1	20	LM 09236 83	3/8-16 x 3/4	4
LM 16065 48	Link-speed	3	*LM 16082 02	Plate-safety	1	LM 09164 32	7/16-14 x 1-1/4	2	LM 09237 35	10 x 3/8	4
LM 16065 51	Lever Assembly	1	*LM 16082 03	Decal-instrument	1	LM 09166 08	7/16-14 x 1-1/2	5	LM 09240 58	Nut-7/16-14	4
LM 16065 53	Rod-latch	1	*LM 16082 50	Bracket-spring	1	LM 09166 09	7/16-14 x 1-3/4	2	LM 09243 56	3/8-16 x 1/2	4
LM 16065 54	Pulley	1	*LM 16082 84	Transmission	1	LM 09166 21	Nut-10-24	6	LM 09243 55	Washer-flat	1
LM 16065 67	Fork-shift	1	LM 16082 85	Transmission	1	LM 09166 22	Nut-1/4-20	13	LM 09244 33	Nut-5/16-18	1
LM 16065 68	Joint-ball	1	*LM 16082 98	Plate-safety	1	LM 09169 50	Nut-3/8-16	33	LM 09246 07	Washer-flat	2
LM 16066 09	Plate-side	1	*LM 16082 99	Decal	1	LM 09169 51	Nut-1/2-13	4	LM 09248 56	5/16-18 x 1/2	7
LM 16066 11	Arm Assembly	1	*LM 16083 04	Support-belt	1	LM 09169 64	Washer-1/4	14	LM 09250 03	1/4-20 x 1/2	14
LM 16066 12	Lever Assembly	1	*LM 16083 08	Retainer Assy.	1	LM 09169 65	Washer-3/8	51	LM 09254 76	Nut-7/16-14	1
LM 16066 15	Rod Assembly	1	*LM 16083 09	Hub-pulley	1	LM 09169 66	Washer-1/2	6	LM 09261 50	Screw-hex	2
LM 16066 16	Molding-dash	1	*LM 16083 10	Spacer	3	LM 09172 31	5/16-18 x 1/2	3	LM 09262 67	10-24 x 5/8	1
LM 16066 36	Draw Bar Assy.	1	*LM 16083 17	Lever Assembly	1	LM 09173 56	Washer-5/16	69	LM 09274 29	1/4-20 x 5/8	6
LM 16066 38	Draw Bar Assy.	1	*LM 16083 22	Pulley-front	1	LM 09173 65	Washer-#10	1	LM 09286 36	Washer-9/16	1
LM 16066 41	Spacer	2	LM 16083 95	Spring-idler	1	LM 09173 72	Nut-5/16-18	51	LM 09286 96	3/8-16 x 1	2
LM 16066 42	Spacer	2	*LM 16084 97	Plate-safety	1	LM 09173 77	Washer-plain	9	LM 09287 09	5/16-18 x 3/8	4
LM 16066 49	Spacer	1	*LM 16085 21	Support-switch	1	LM 09173 78	Washer-3/8	26	LM 09287 11	7/16-14 x 5/8	4
LM 16066 53	Tank-fuel	1	*LM 16085 22	Clip-switch	1	LM 09173 97	5/16-18 x 3/4	12	LM 09287 31	Nut-3/8-16	1
LM 16066 55	Strap-fuel tank	2	*LM 16085 35	Connector	1	LM 09174 00	3/8-16 x 1-1/4	5	LM 09287 45	1/4-20 x 1-1/4	2
LM 16066 62	Arm Assembly	1	*LM 16086 21	Rod-pulley	1	LM 09174 02	3/8-16 x 2	1	LM 09287 75	1/4-20 x 1-1/4	1
LM 16066 77	Pad-foot (R. H.)	1	*LM 16086 24	Shaft Assembly	1	LM 09174 03	7/16-14 x 2	1	LM 09288 04	1/4-20 x 3/8	2
LM 16066 78	Pad-foot (L. H.)	1	*LM 16086 25	Decal	2	LM 09174 07	3/8-24 x 1-1/8	1	LM 09296 98	5/16-18 x 5/16	2
LM 16066 89	Throttle	1	*LM 16086 32	Rod-drag	1	LM 09174 15	Nut-10-32	1	LM 16013 85	5/16-18 x 1-1/2	1
LM 16067 64	Harness Assy.	1	*LM 16087 02	Pin	4	LM 09174 21	Nut-3/8-16	3	LM 16024 03	3/8-16 x 1-1/2	1
LM 16067 65	Wire Assembly	1	LM 16104 04	Spacer	1	LM 09174 52	10-32 x 1/2	3	LM 16024 04	3/8-16 x 1	1
LM 16067 66	Harness Assy.	1	LM 16104 56	Bushing	12	LM 09176 42	Washer-5/16	10	LM 16040 97	1/4-20 x 5/8	6
LM 16067 68	Lead-switch	1	LM 16105 90	Brake-sheave	1	LM 09180 16	Nut-hex	1	LM 16054 96	3/8-24 x 5/16	1
LM 16067 69	Harness-switch	1	LM 16107 03	Spring	1	LM 09181 99	Washer-7/16	68	LM 16054 97	7/16-14 x 4	2
LM 16068 17	Rod Assembly	1	LM 80210 10	Collar-set	3	LM 09182 72	7/16-14 x 1	4	LM 16066 91	Washer-special	1
LM 16068 23	Clip-spring	2	LM 80610 12	Spacer	3	LM 09182 13	Nut-7/16-14	14	LM 16070 21	Nut-3/4-16	5
LM 16068 99	Coil Assembly	1	LM 80610 48	Ring-retaining	2	LM 09184 30	Washer-5/16	18	LM 16076 08	Washer-insulation	2
LM 16069 00	Hub Assembly	1	LM 81610 45	Clip-spring	1	LM 09184 47	Pin-cotter	9	*LM 16080 80	Bolt-shoulder	1
LM 16069 03	Rod Assembly	2	LM 82611 00	Bolt-hub	10	LM 09184 48	Pin-cotter	2	LM 80610 12	Washer	3
LM 16070 25	Arm Assembly	1	FASTENING PARTS			LM 09184 51	Pin-cotter	1			
LM 16070 26	Lever Assembly	1	LM 01050 50	Washer	1	LM 09191 99	Washer-7/16	2			

**HOMELITE®**

A Textron  
DIVISION

PORT CHESTER, NEW YORK, U.S.A. 10573